

User Manual

Filename: D000030110 E650 ZxD400xT Series 3 User Manual.docx
© 2009 Landis+Gyr AG

Revision History

Version	Date	Comments
a	01.07.2009	First edition
b	15.10.2009	Fig. 4.16 replaced Referenced documents corrected in chapter 1.8 Error code F.F 00 00 2x 00 added in section 6.2.2 Error Groups Various grammatical and language errors corrected throughout the document
c	12.11.2009	Minor formatting and typing errors corrected
d	27.05.2010	Update for Firmware Version B31

Copyright © 2009, Landis+Gyr. All rights reserved. Subject to change without notice.

Landis+Gyr AG
Feldstrasse 1
CH-6301 Zug
Switzerland
Phone: +41 41 935 6000
www.landisgyr.com

About this Document

Range of validity	The present user manual applies to the meters specified on the title page.
Purpose	<p>The user manual contains all the information required for application of the meters for the intended purpose. This includes:</p> <ul style="list-style-type: none">• Provision of knowledge concerning characteristics, construction and function of the meters• Information about possible dangers, their consequences and measures to prevent any danger• Details concerning the performance of all work throughout the service life of the meters (parameterisation, installation, commissioning, operation, maintenance, shutting down and disposal)
Target group	The contents of this user manual are intended for technically qualified personnel of utilities (energy supply companies) responsible for the system planning, installation and commissioning, operation, maintenance, decommissioning and disposal of the meters.
Reference documents	<p>The technical data and functional description of the meters are explained in separate documents:</p> <ul style="list-style-type: none">• D000030106 "E650 ZxD400xT Series 3 Technical Data"• D000030112 "E650 ZxD Series 3 Functional Description"
Conventions	<p>The structure and significance of meter type designations are described in section 1.3 "Type Designation". The following conventions are employed in this user manual for representing type designations:</p> <ul style="list-style-type: none">• The lower case letter "x" can be used as an unknown to indicate different versions (e.g. ZxD400 for the ZMD400 and ZFD400 meters or ZMD410xT for the ZMD410AT and ZMD410CT meters).• The digit pair "00" can be used to indicate accuracy data (e.g. ZxD400 for the ZxD405 and ZxD410 meters).• The abbreviated type designation ZMD or ZFD meters can be used when all three-phase four-wire meters or three-phase three-wire meters are meant.• The following collective terms are also sometimes used instead of the type designation:<ul style="list-style-type: none">– "Active energy meters" for the ZxD400AT meters– "Combimeters" for the ZxD400CT meters

Table of Contents

1	Description of Unit	6
1.1	Field of Application	6
1.2	Characteristics	6
1.3	Type Designation	8
1.4	Block Schematic Diagram	9
1.5	Measuring System	12
1.5.1	Input Signals	12
1.5.2	Signal Processor	13
1.5.3	Measured Quantities	15
1.5.4	Formation of Measured Quantities	16
1.5.5	Summation Channels	22
1.6	Data Profile	23
1.6.1	Stored Value Profile	23
1.6.2	Load Profile 1 and Load Profile 2 (option)	23
1.6.3	Event Log	24
1.7	Communication	27
1.7.1	Optical Interface	27
1.7.2	Communication Units	27
1.8	MAP Software Tools	29
1.9	Anti-Tampering Features	30
1.9.1	DC Magnet Detection	30
1.9.2	Terminal Cover Detection	30
2	Safety	31
2.1	Safety Information	31
2.2	Responsibilities	31
2.3	Safety Regulations	32
2.4	Radio interference	32
3	Mechanical Construction	33
3.1	Sealing	33
3.2	Face Plates	36
3.3	Connections	37
3.4	Connection Diagrams (Examples)	39
3.5	Dimensions	43
4	Installation and De-Installation	44
4.1	Basic Information for Connecting Meter	44
4.1.1	Connection to Low Voltage with Current Transformers	44
4.1.2	Connection to Medium and High Voltage (Aron Circuit)	45
4.1.3	Connection to Medium and High Voltage (Three-Phase Four-Wire Circuit)	46
4.2	Mounting the Meter	47
4.3	Connecting Meter	49
4.3.1	Connection of R-S485 Interface	52
4.4	Check of Connections	53

4.5	Commissioning, Functional Check and Sealing	53
4.6	Installation of Terminal Cover Detection	55
4.7	De-Installation	56
5	Operation	58
5.1	Operation with Auxiliary Power Supply	58
5.2	Control Elements	58
5.2.1	Display Keys	58
5.2.2	Control of Display via Optical Interface	59
5.2.3	Reset Key	59
5.3	Display	60
5.3.1	Introduction	60
5.3.2	Basic Layout	60
5.3.3	Index System	61
5.4	Types of Display	62
5.4.1	Operating Display	62
5.4.2	Display Menu	63
5.4.3	Service Menu	67
5.5	Alert LED	68
5.6	Optical Test Output	69
5.7	Data Readout	70
5.7.1	Readout to IEC 62056-21	71
5.7.2	Readout to dlms	72
5.8	Input of Formatted Commands	74
5.9	Changing Values in Set Mode	75
6	Service	76
6.1	Operating Faults	76
6.2	Error Messages	76
6.2.1	Structure of an Error Message	77
6.2.2	Error Groups	78
6.3	Repairing Meters	83
7	Maintenance	84
7.1	Meter Testing	84
7.1.1	Test Mode	84
7.1.2	Measuring Times	84
7.1.3	Optical Test Output	85
7.1.4	Creep Test	87
7.1.5	Starting Test Active Part	87
7.1.6	Starting Test Reactive Part	87
7.2	Changing the Battery	87
8	Disposal	90
9	Index	91

1 Description of Unit

This chapter provides you with a brief overview of the design and function of the ZxD400xT meters.

1.1 Field of Application

ZxD400xT meters can be used for transformer connection at all three voltage levels, namely on low, medium and high voltage. They are primarily used by medium and large consumers and in the field of energy generation and exchange.

The ZMD400xT meter is especially suitable for applications at the low voltage level, while the ZFD400xT meter is generally used more at the medium and high voltage levels.

ZxD400xT meters have a comprehensive tariff structure. This extends from seasonal tariffs to multiple energy and demand tariff rates.

The ZMD400xT and ZFD400xT meters are designed for connection to current transformers with 5 A or 1 A rated current or as a special version for both applications (5//1).

The ZMD400CT and ZFD400CT combimeters record active and reactive energy consumption, the ZMD400AT and ZFD400AT active energy meters only the active energy in three-phase four-wire or three-phase three-wire networks (low, medium and high voltage) and from this determine the required electrical measured quantities. For this purpose they are connected to the measuring point via current transformers and possibly also voltage transformers:

- **Low voltage:** ZMD400xT with current transformers
- **Medium voltage:** ZFD400xT (sometimes also ZMD400xT) with current and voltage transformers
- **High voltage:** ZMD400xT (sometimes also ZFD400xT) with current and voltage transformers

The data determined are displayed (LCD) and are also available at the optical interface for data acquisition, with an appropriate communication unit also as required via CS, RS232, RS485, modem, etc.

When equipped with transmitting contacts, the meters can also be used as transmitting meters for telemetering. The tariff rates can be controlled internally or externally.

With a communication unit, the meters can also be used for recording counter pulses for other physical media (e.g. water or gas volumes).

1.2 Characteristics

ZxD400xT meters have the following basic characteristics:

- Recording of active, reactive and apparent energy in all four quadrants (ZxD400CT) or recording of imported and exported active energy (ZxD 400AT)
- Tariff system with energy and demand tariff rates, stored values, load profiles etc.
- Extended functions such as monitoring functions, sliding maximum demand, etc. (for ZxD400CT additionally power factor $\cos\phi$)

- Tariff control
 - External
 - via control inputs (ZxD400xT21 and ZxD400xT41)
 - via communication interfaces using formatted commands
 - Internal
 - by integral time switch (ZxD400xT24 and ZxD400xT44)
 - by event signals based on monitored values, such as voltage, current, demand etc.
- Display of data on a liquid crystal display (LCD)
- Active and reactive power per phase and true RMS values of voltages and currents by means of digital signal processing (DSP) chips
- Accuracy: Compliance with IEC class 1 or 0.5 S and with MID accuracy class B or C for active energy consumption (ZxD400xT) and IEC class 1 for reactive energy (ZxD400CT).
Exception: ZxD402CT – IEC class 0.2S for active energy and IEC class 0.5 for reactive energy.
- Flexible measuring system through parameterisation (definition of different variables by software)
- Correct measurement even with failure of individual phases or when used in two- or single-phase networks
- Wide range of measurement from starting current to maximum current
- Optical interface according to IEC 62056-21 and dlms
 - for direct readout of meter data
 - for service functions of the meter, extension board and communication unit (e.g. parameterisation)
- Inputs for recording fixed valency pulses (communication unit)
- Output contacts (solid-state relays) for fixed valency pulses, control signals and status messages
- Installation aids
 - Indication of phase voltages, phase angles, rotating field and direction of energy
- Storage of event information, e.g. voltage failures, exceeding of thresholds or error messages. Event information can be read out via the available interfaces. Important events can be communicated to the energy supply company as operational messages (sending of SMS messages, control of an arrow in the display, drive for an output contact, etc.).
- Interfaces such as CS, RS232, RS485, modem, etc. for remote transmission of data (communication unit)
- Auxiliary power supply for communication with the meter if no measuring voltage is present

1.3 Type Designation

Type designation		ZMD	4	10	C	T	44	4207	S3
Network Type									
ZFD	3-phase 3 wire network (F-circuit)								
ZMD	3-phase 4 wire network (M-circuit)								
Connection Type									
4	Transformer operated								
Accuracy Class									
10	Active energy class 1 (IEC), B (MID)								
05	Active energy class 0.5 (IEC), C (MID)								
02	Active energy class 0.2 (IEC)								
Measured Quantities									
C	Active and reactive energy								
A	Active energy								
Construction									
T	With exchangeable communication units								
Tariffication									
21	Energy rates, external rate control via control inputs								
24	Energy rates, internal rate control via time switch (additionally possible via control inputs)								
41	Energy and demand rates, external rate control via control inputs								
44	Energy and demand rates, internal rate control via time switch (additionally possible via control inputs)								
All versions with 3 control inputs and 2 output contacts									
Additional functions									
000x	No extension board								
060x	6 outputs								
240x	2 control inputs, 4 outputs								
420x	4 control inputs, 2 outputs								
045x	4 outputs, auxiliary power supply 100–240 VAC/DC								
046x	4 outputs, auxiliary power supply 12–24 VDC								
xxx0	no additional functions								
xxx2	DC-magnet-detection								
xxx7	load profile								
xxx9	DC-magnet-detection and load profile								
Series 3									

As the communication unit is a device on its own, it is not part of the meter's type designation. The customer can exchange it at any time without opening the certification seal. Each communication unit has its own user manual.

Series designation

The hardware version is defined with a series designation. The first hardware generation (Series 1) does not have a series designation.

The type designation on the nameplate ends with the series designation S2 for the 2nd hardware generation (Series 2). An attached suffix points out that the meter is equipped with certain non-standard features, e.g. S2s represents a Series 2 meter with symmetrical terminal layout.

S3 represents the newest hardware generation.

Firmware version

The meter's firmware version, which determines certain meter characteristics, can be displayed on the LCD e.g. as part of the rolling display (depending on parameterisation) and can be read out in the following two ways:

- meter data readout (depending on parameterisation)
- meter identification readout (see section 5.7 "Data Readout")

Class 0.2

Some executions of ZMD400CT/CR meters are available with accuracy class 0.2S. These meters fulfill the IEC accuracy class 0.2S for active energy and class 0.5 for reactive energy. For details see the corresponding datasheet.

1.4 Block Schematic Diagram

This chapter provides an overview of the function of ZxD400xT meters based on a block schematic diagram.

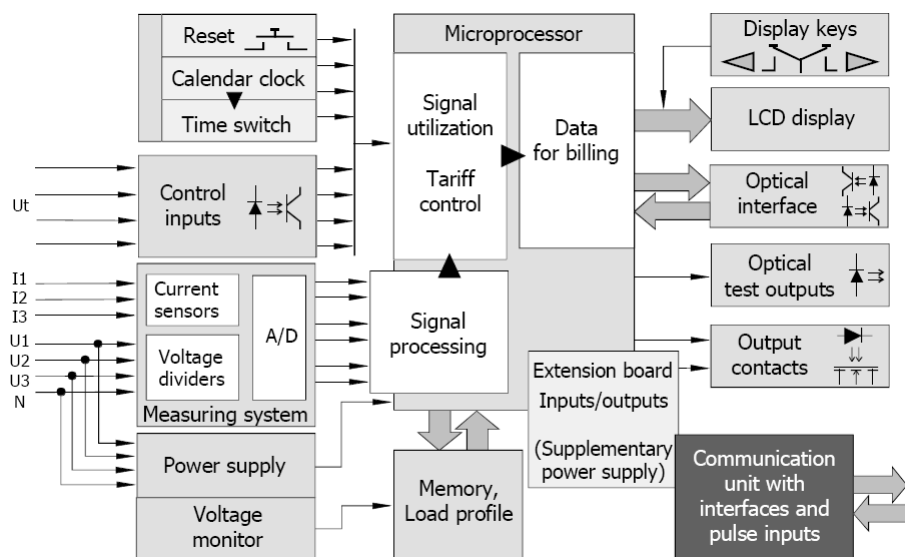


Fig. 1.1 Block schematic diagram ZMD400xT

The ZxD400AT active energy meters record the imported and exported active energy consumption, while the ZxD400CT combimeters record the active and reactive energy consumption in all four quadrants.

The ZxD400xT meters can be fitted with modular communication interfaces in a communication unit, which can be exchanged or used in the field as required.

Inputs

The main meter inputs are:

- Connections of phase voltages (U1, U2, U3), phase currents (I1, I2, I3) and neutral conductor N
 - for processing in the measuring system
 - for the three-phase power supply to the meter and voltage monitor
- Control inputs U_i (3 fixed, plus up to 4 others on extension board) for:
 - Changeover of energy and demand tariff rates
 - Resetting
 - Demand inhibition
 - Synchronizing

Opto-couplers protect the internal circuitry from interference, which could otherwise enter via the control inputs.

- Keys
 - for display control (display keys, optical interface)
 - for resetting or service functions (reset key)
- Pulse inputs for connection of external pulse transmitters (only for meters equipped with a communication unit)

Outputs

The meter has the following outputs:

- LCD display with display keys for local reading of billing data (single 8-digit display with additional information, such as energy direction, type of energy, presence of phase voltages and identification number)
- Optical test outputs (red, 1 in active energy meters, 2 in combimeters)
- Alert LED (red) to indicate alerts on the front face of the meter
- Static relay with freely parameterised signal assignment (2 fixed, plus up to 6 others on the extension board)
- Optical interface for automatic local data acquisition by a suitable acquisition unit (handheld terminal)
- Communication interfaces of various kinds in the communication unit (see also section 1.7 "Communication")

Measuring system

The input circuits (voltage dividers and current transformers) record voltage and current in the individual phases. Analogue-digital converters digitise these values and feed them as instantaneous digital values via calibration stages to a signal processor.

Signal processing

The signal processor determines the following measured quantities from the instantaneous digital values of voltage and current for each phase and forms their mean value over one second:

- Active power per phase
- Reactive power per phase (combimeters ZxD400CT only)
- Phase voltages
- Phase currents
- Network (mains) frequency
- Phase angles

Signal utilisation

For signal utilisation in the various registers, the microprocessor scans the measured quantities every second to determine the following values:

- Active energy (sum and individual phases, separated according to energy direction, if required in the combimeters ZxD400CT also assigned to the 4 quadrants)
- Reactive energy (only for combimeters ZxD400CT, sum and individual phases, separated according to energy direction, assigned to the 4 quadrants)
- Apparent energy (only for combimeters ZxD400CT, sum and individual phases, separated according to energy direction)
- Power factor $\cos\varphi$ (only for combimeters ZxD400CT, individual phases and mean value)
- Phase voltages
- Phase currents and neutral current
- Direction of rotating field
- Total harmonic distortions of active energy, voltage and current
- Energy losses (line losses and transformer losses)

Tariff control

Tariff control is performed:

- Externally via control inputs (3 fixed, plus up to 4 others on the extension board)
- Externally via communication interfaces using formatted commands
- Internally by time switch and calendar clock
- By event signals based on threshold values of the monitoring functions

Data preparation for billing

The following registers are available for evaluation of the individual measured values:

- 32 for energy rates
- 27 for total energy
- 10 for running mean demand values
- 24 for demand rates
- 2 for power factors $\cos\varphi$ (combimeters ZxD400CT only)
- up to 41 diagnostic registers
- others for values of voltage and current, network frequency and phase angles

Memory

A non-volatile flash memory serves to record data profiles and also contains the configuration and parameterisation data of the meter and secures the billing data against loss due to voltage failures.

Power supply

The supply voltages for the meter electronics are obtained from the three-phase network, whereby the phase voltage can vary over the entire voltage range without the supply voltage having to be adjusted. A voltage monitor ensures correct operation and reliable data recovery in the event of a power failure and correct restarting when the voltage is restored.

Auxiliary power supply

For medium or high-voltage applications in particular, the measuring voltage can be switched off. Since the meter normally obtains its supply from the measuring voltage, it is also switched off and cannot be read. The auxiliary power supply connected in parallel with the normal power supply ensures operation of the meter free from interruption, so that it can be read at any time. The auxiliary power supply is situated on an extension board.

Extension board

The extension board is fitted inside the meter and is secured by the certification seals. It cannot be exchanged. It can have the following components:

- up to 4 control inputs in combination with
- up to 6 output contacts (solid-state relays)
- an auxiliary power supply

Communication unit

The communication unit for fitting only in the ZxD400xT meters is a complete unit in its own case. If present, it is situated behind the front door, and is therefore secured by a utility seal and can be exchanged or inserted in the field if necessary. It contains:

- Communication interfaces as required for remote readout of the meter (e.g. CS, RS232, RS485, modem)
- 2 signal inputs (S0 interfaces) for processing external pulse transmitters

1.5 Measuring System

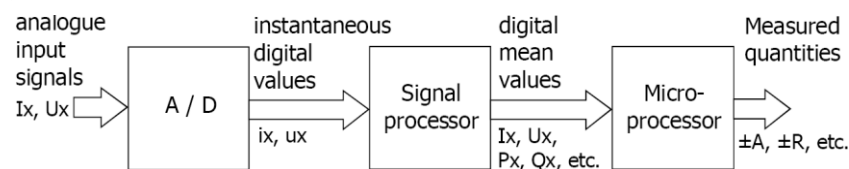


Fig. 1.2 Block schematic diagram of measuring system

1.5.1 Input Signals

The meter has the analogue current values I1, I2 and I3 and analogue voltage values U1, U2 and U3 available as input signals.

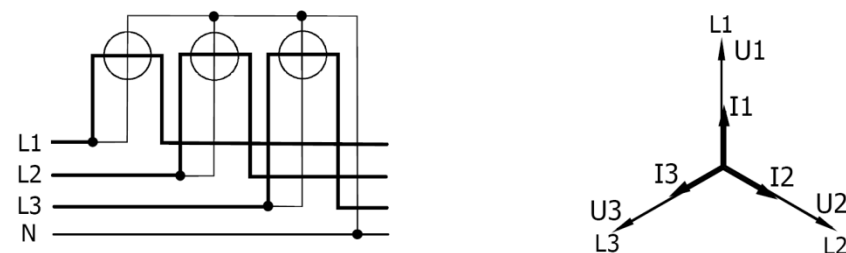
ZMD400xT

Fig. 1.3 Type of measurement ZMD400xT

Since the ZMD400xT measures the individual phases mutually independently with one measuring element each, it can record the sum of the three phases, the individual phases themselves, the phase angle between voltage and current as well as the angle between voltages U1–U2 and U1–U3.

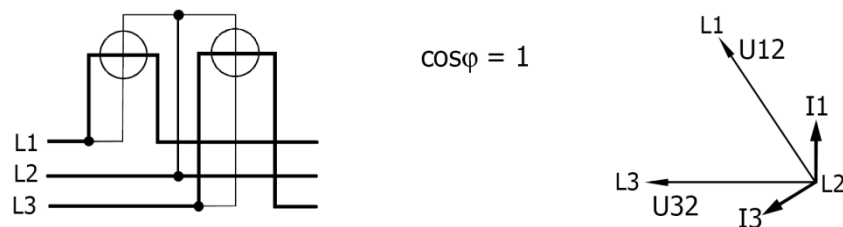
ZFD400xT

Fig. 1.4 Type of measurement ZFD400xT

The ZFD400xT with Aron circuit records with its two measuring elements the phase currents I1 or I3, together with the corresponding voltage U12 or U32. It cannot therefore construct any actual single-phase values. In addition, the phase angles between voltage and current always have an additional angle of 30° and are therefore not representative.

Voltage input

High resistance voltage dividers reduce the voltages U1, U2 and U3 (58 to 240 V) applied to the meter to a proportionate amount of a few mV (U_U) for further processing.

Current input

Internal current transformers reduce the input currents I1, I2 and I3 to the meter (0 to 10 A) for further processing. The secondary currents of these current transformers develop voltages proportional to the input currents across resistors, also of a few mV (U_I).

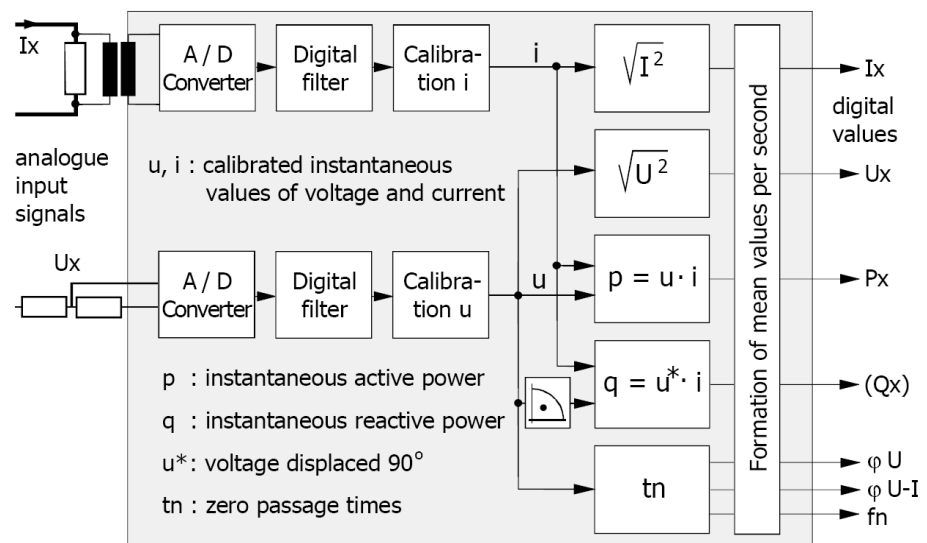
1.5.2 Signal Processor

Fig. 1.5 Principle of signal processor

ZxD400AT active energy meters do not measure reactive energy.

Digitizing


The analogue signals U_x and I_x are digitised in Sigma-Delta converters (analogue-digital converters with highest resolution) with a sample rate of 1.6 kHz and then filtered. A following calibration stage compensates for the natural errors of the voltage divider or current transformer, so that no further adjustment is necessary in the subsequent processing.

Calibrated digital instantaneous values of voltage (u) and current (i) for all three phases are then available as intermediate values for the formation of the required values in the signal processor.

Calculation of active power

The instantaneous value of active power p is produced by multiplying the instantaneous values of voltage u and current i (the active component cor-

responds to the product of voltage component with the current component parallel to the voltage). Thereby the harmonics up to 1 kHz are measured correctly.

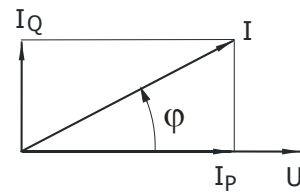

Calculation per phase of
 $P = U \cdot I \cdot \cos \varphi$

Fig. 1.6 Active power calculation

Instantaneous power with sign

If the meter is parameterised to calculate instantaneous power as signed values, the following values of power are available:


Active P: + in QI and QIV, - in QII and QIII
 Reactive P: + in QI and QII, - in QIII and QIV

Calculation of reactive power

There are two possibilities to calculate the instantaneous value of reactive power (ZxD400Cx combimeters only):

measured:

For the instantaneous value of reactive power q the instantaneous value of voltage u must be rotated by 90° before multiplication (the reactive component is the product of the voltage component with the current component vertical to the voltage). Thereby no harmonics are measured since only the fundamental wave is rotated through 90° .

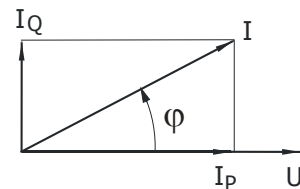

Calculation per phase of
 $Q = U \cdot I \cdot \sin \varphi$

Fig. 1.7 Reactive power calculation (method: measured)

Calculated vectorial (not recommended):

The instantaneous value of reactive power is calculated using the values of active power and apparent power.

The reactive power is the square root of the square value of apparent power minus the square value of active power. This method includes the harmonics.

$$Q = \sqrt{S^2 - P^2}$$

U_{RMS} , I_{RMS} calculation

The square values of voltage and current are obtained by multiplying the instantaneous values of voltage and current by themselves. From these values the signal processor forms the corresponding single-phase RMS values U_{RMS} and I_{RMS} .

Time measurement

The network frequency can be calculated from the time measured between two zero passages (change from negative to positive value of voltage U_1). The times between zero passage of the phase voltage U_1 and those of the other phase voltages U_2 and U_3 serves to determine the phase angle between the voltages and of the rotating field.

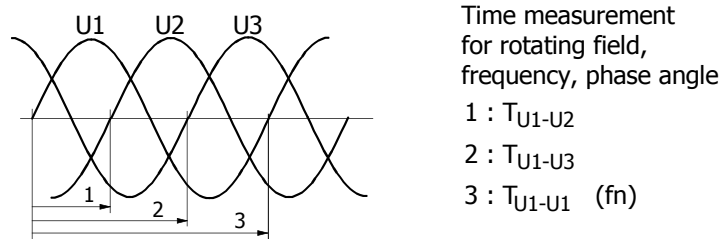


Fig. 1.8 Time measurement

The phase angle between voltage and current is determined by the times between zero passage of the phase voltage U1 and those of the phase currents I1, I2 and I3.

Mean value formation For further processing of the individual signal the signal processor generates mean values over one second, which the following microprocessor scans at intervals of one second.

1.5.3 Measured Quantities

Measured quantity		ZMD300 ZMD400	ZFD400
Active energy in quadrant I	A (QI)	Sum / Phases	Sum
Active energy in quadrant II	A (QII)	Sum / Phases	Sum
Active energy in quadrant III	A (QIII)	Sum / Phases	Sum
Active energy in quadrant IV	A (QIV)	Sum / Phases	Sum
Active energy import	+A (QI+QIV)	Sum / Phases	Sum
Active energy export	-A (QII+QIII)	Sum / Phases	Sum
Active energy, absolute value	+A + -A	Sum / Phases	Sum
Active energy, absolute value	+A - -A	Sum / Phases	Sum
Active energy import summation	$\Sigma +A$	Sum	Sum
Active energy export summation	$\Sigma -A$	Sum	Sum
Reactive energy in quadrant I	R (QI)	Sum / Phases	Sum
Reactive energy in quadrant II	R (QII)	Sum / Phases	Sum
Reactive energy in quadrant III	R (QIII)	Sum / Phases	Sum
Reactive energy in quadrant IV	R (QIV)	Sum / Phases	Sum
Reactive energy import	+R (QI+QII)	Sum / Phases	Sum
Reactive energy export	-R (QIII+QIV)	Sum / Phases	Sum
Reactive energy import	+R (QI+QIV)	Sum / Phases	Sum
Reactive energy export	-R (QII+QIII)	Sum / Phases	Sum
Reactive energy, combined	R (QI+QIII)	Sum / Phases	Sum
Reactive energy, combined	R (QII+QIV)	Sum / Phases	Sum
Reactive energy, absolute value	+R + -R	Sum / Phases	Sum
Reactive energy, absolute value	+R - -R	Sum / Phases	Sum
Reactive energy import summation	$\Sigma +R$	Sum	Sum
Reactive energy export summation	$\Sigma -R$	Sum	Sum

Measured quantity		ZMD300 ZMD400	ZFD400
Apparent energy import	+S (QI+QIV)	Sum / Phases	Sum
Apparent energy export	-S (QII+QIII)	Sum / Phases	Sum
Phase voltages (RMS)		U1, U2, U3	U12, U32
Phase currents (RMS)		I1, I2, I3	I1, I3
Neutral current	I0	yes	no
Network frequency	f _n	yes	yes
Phase angle between voltages	φ U	U1-U2 / U1-U3*	U12-U32 **
Phase angle between voltage and current	φ U-I	U1-I1, U1-I2, U1-I3 * or U1-I1, U2-I2, U3-I3	U12-I1, U12-I3 **
Power factor	PF	Sum / Phases	Sum
Direction of rotating field		yes	yes
THD of active energy import	+THD _A	Sum	Sum
THD of active energy export	-THD _A	Sum	Sum
THD of active energy (percent)	THD _A [%]	Sum	Sum
THD of phase voltages (absolute)	THD _U	Sum / Phases	Sum
THD of voltage (percent)	THD _U [%]	Sum	Sum
THD of phase currents (absolute)	THD _I	Sum / Phases	Sum
THD of current (percent)	THD _I [%]	Sum	Sum
Line (copper) losses of active energy	OLA	Sum	Sum
Transformer (iron) losses of active energy	NLA	Sum	Sum
Voltage square hours	U ² h	Sum	Sum
Ampere square hours	I ² h	Sum	Sum

1.5.4 Formation of Measured Quantities

By scanning the mean values of active power P, and in combimeters also reactive power Q every second, energy components are produced (Ws or vars) at fixed intervals (every second) and with varying energy magnitudes or demand. These energy components are scaled by the microprocessor corresponding to the meter constant and are then available as measured quantities for selection of the measured values. The measured values are fed directly to the following registers to record the energy and the maximum demand (in combimeters also of minimum power factor).

Active energy

The active energy in the individual phases ±A1, ±A2 and ±A3 are formed directly from the mean values of active power P1, P2 and P3.

By summing the mean values of active energy A1, A2 and A3 the microprocessor calculates the total active energy import +A or the total active energy export -A.

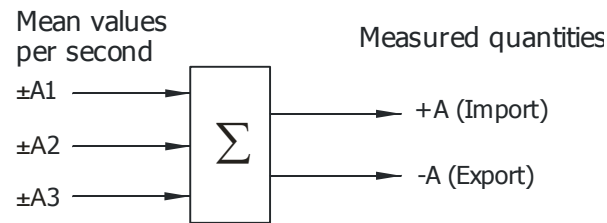


Fig. 1.9 Total active energy

Reactive energy

The reactive energy values of the individual phases $\pm R1$, $\pm R2$ and $\pm R3$ are obtained in the combimeters directly from the mean values of reactive power Q1, Q2 and Q3.

By summing the mean values of reactive energy R1, R2 and R3, the microprocessor calculates the total positive reactive energy +R or the total negative reactive energy -R.

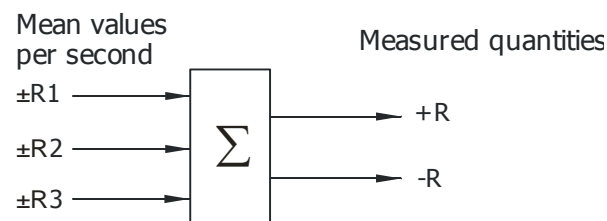


Fig. 1.10 Total reactive energy

The microprocessor can allocate the reactive energy to the 4 quadrants in the combimeters from the signs of R and A:

- Reactive energy in 1st quadrant: +Ri
- Reactive energy in 2nd quadrant: +Rc
- Reactive energy in 3rd quadrant: -Ri
- Reactive energy in 4th quadrant: -Rc

In the same way it can allocate the reactive energy of the individual phases to the 4 quadrants.

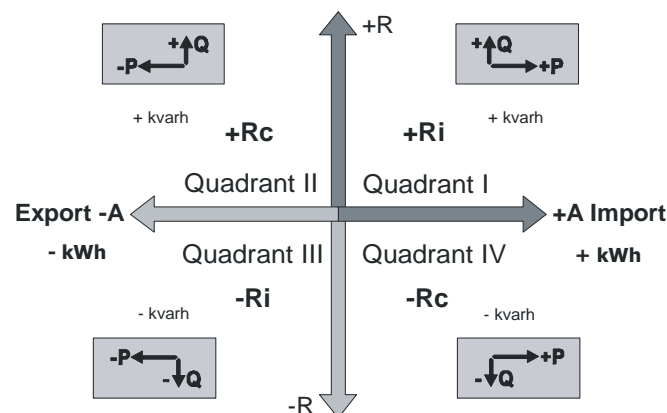


Fig. 1.11 4-quadrant measurement

The quadrants are numbered from top right as 1st quadrant (+A/+Ri) anti-clockwise to the 4th quadrant (-A/-Rc) at bottom right.

Apparent energy

The apparent energy is calculated in the combimeters in two ways:

- by vectorial addition of the active and reactive energy of the individual phases
- by multiplying the rms values of voltage and current of the individual phases

The method of calculation can be parameterised (only one possible in each case).

Calculation method 1 (vectorial addition)

From the mean values A1, A2 and A3 and R1, R2 and R3 the microprocessor calculates the apparent energy of the individual phases $\pm S1$, $\pm S2$ and $\pm S3$ as well as the total apparent energy $\pm S$.

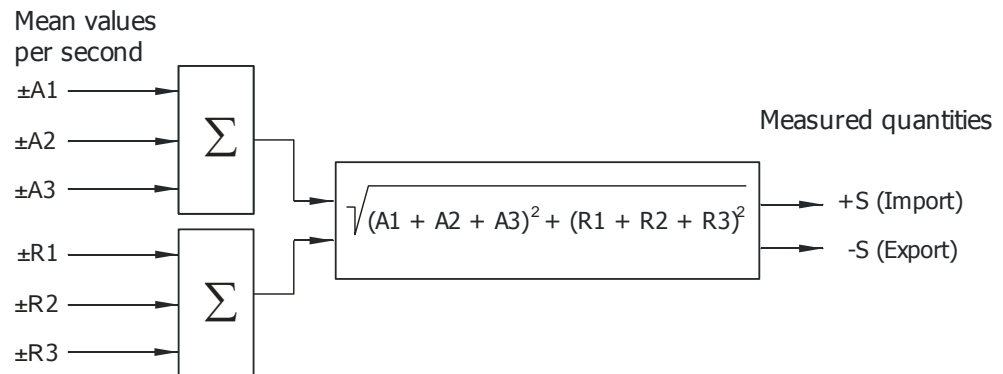


Fig. 1.12 Total apparent energy according to calculation method 1

**Only fundamental wave considered for reactive energy**

Only the fundamental wave is considered for the calculation of the reactive energy share; possible harmonics are not taken into account.

Calculation method 2 (from rms values)

From the mean values $U1_{rms}$, $U2_{rms}$, $U3_{rms}$ and $I1_{rms}$, $I2_{rms}$, $I3_{rms}$ the microprocessor calculates by multiplication the apparent power of the individual phases $\pm VA1$, $\pm VA2$ and $\pm VA3$ and summates these for the total apparent power $\pm VA$.

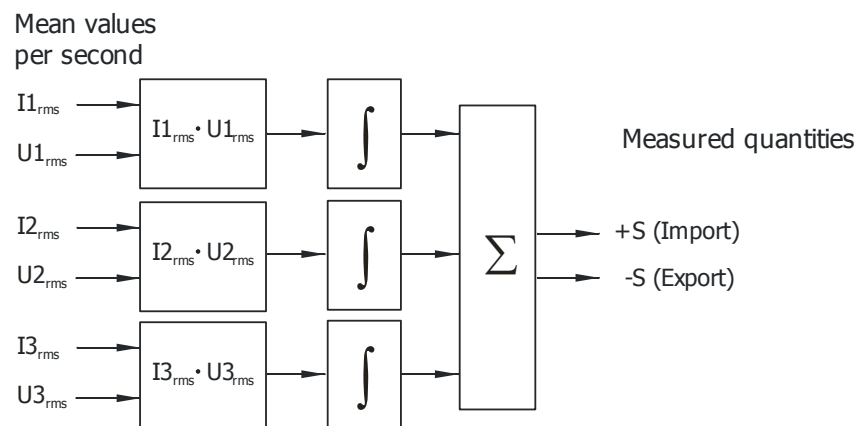


Fig. 1.13 Total apparent power according to calculation method 2 (ZxD400Cx combimeters only)



Harmonics considered for reactive energy

As RMS values are used for the calculation of the apparent energy with calculation method 2, not only the fundamental wave but also the harmonics are taken into account. Therefore, if harmonics are present, the measured values are greater than those of calculation method 1.

Summation channels The values of two measurement quantities (incl. pulse inputs EX1 and EX2) can be added. The added quantities must be of the same energy type (active, reactive or apparent). The sum is stored in a total energy register.

Power factor $\cos\varphi$ The power factor $\cos\varphi$ is calculated in combimeters as follows:

$$\cos\varphi = \frac{P}{S}$$

The meter uses the method of calculation employed for calculating the apparent power.

Phase voltages The rms values of the voltages $U1_{rms}$, $U2_{rms}$ and $U3_{rms}$ are obtained from the mean values of the squares of the voltages by extracting the root and directly from these the phase voltages $U1$, $U2$ and $U3$.

Phase currents The rms values of the currents $I1_{rms}$, $I2_{rms}$ and $I3_{rms}$ are obtained from the mean values of the squares of the currents by extracting the root and directly from these the phase currents $I1$, $I2$ and $I3$.

Neutral current The signal processor calculates the instantaneous neutral current $i0$ by adding the instantaneous phase currents $i1$, $i2$ and $i3$.

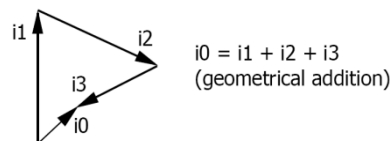


Fig. 1.14 Neutral current I_0

Network frequency The signal processor calculates the network frequency f_n by forming the reciprocal from the time t_{U1-U1} between two zero passages of voltage $U1$.

Phase angles The signal processor calculates the phase angles between voltages $U1-U2$ and $U1-U3$ from the times t_{U1-U1} , t_{U1-U2} and t_{U1-U3} between zero passages of the various voltages.

The signal processor calculates the phase angle between voltage $U1$ and current per phase from the times t_{U1-I1} , t_{U1-I2} and t_{U1-I3} between zero passages of the voltage $U1$ and the phase currents.

2 forms of representation are available for displaying the phase angle. These can be selected by parameterisation.

Case 1: All voltage and current angles are displayed clockwise with reference to the voltage in phase 1. The values of the angles are always positive and can be from 0 to 360°.

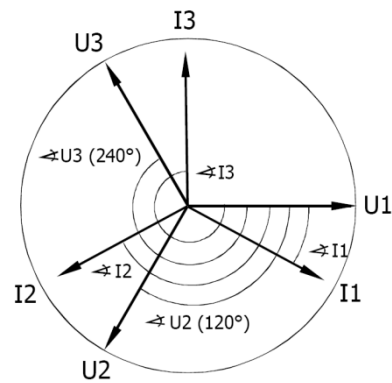


Fig. 1.15 Phase angle case 1

Case 2: The voltage angles are displayed as in case 1. The angles of the currents are displayed, however, with reference to the associated phase voltage and can have values between -180° and $+180^\circ$.

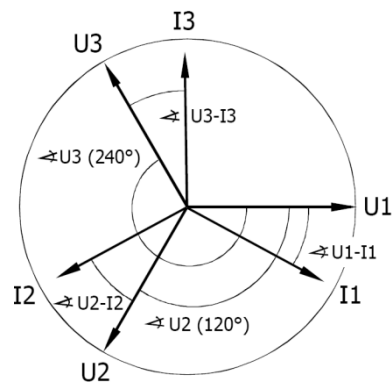


Fig. 1.16 Phase angle case 2

Direction of rotating field

The direction of the rotating field is calculated by the microprocessor based on the phase angle of the 3 voltages. If the direction of rotation corresponds to that specified by the parameterisation, the phase voltage indications L1, L2 and L3 are continuously lit. Otherwise they flash every second.

Total harmonic distortion

The measuring system produces information about the total harmonic distortion of the active energy.

For that purpose, the voltages are fed through notch filters, which remove the fundamental wave.

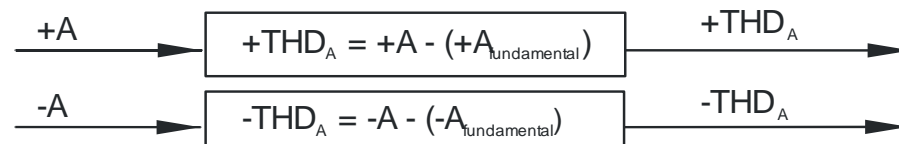


Fig. 1.17 Calculation of total harmonic distortion

In addition, the following absolute and relative THD values are available:

- THD of active energy (relative to the nominal active energy)
- THD of phase voltages (absolute)
- THD of voltage (relative to the nominal voltage)
- THD of phase currents (absolute)
- THD of phase current (relative to the nominal current)

Losses

Depending on the metering point in the network, the meter does not only measure the net energy that is transferred from the power station to the user but also the line losses (caused by the copper resistance R_{Cu}) and the transformer losses (caused by the iron resistance R_{Fe}).

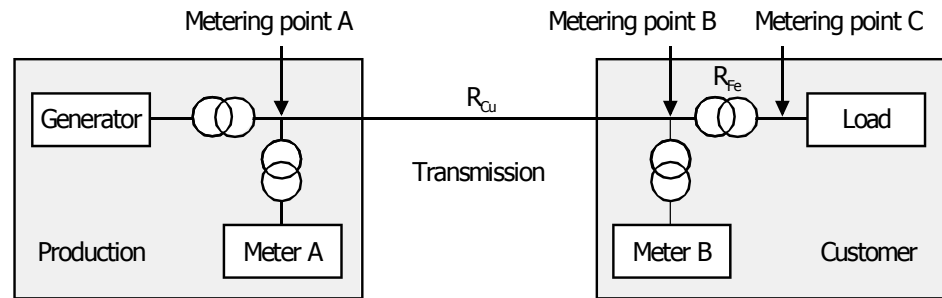


Fig. 1.18 Calculation of Losses

Line losses are caused by the copper resistance R_{Cu} of the transmitting line. The copper resistance is only effective if there is a load and therefore current is actually flowing.

- On Load Active OLA for line losses of active energy

The transformer losses represent all losses of the transformer. They are mainly caused by the iron core of the transformer. Transformer losses (equivalent resistance R_{Fe}) are present whenever the transformer is connected to the network.

- No Load Active NLA for transformer losses of active energy

Based on the I_{RMS} and U_{RMS} values, the microprocessor generates the following measured quantities:

OLA	On load active. Line (copper) losses of active energy. $OLA = I^2 h \times R_{Cu}$. The value of R_{Cu} can be set by parameterisation.
NLA	No load active. Transformer (iron) losses of active energy. $NLA = U^2 h / R_{Fe}$. The value of R_{Fe} can be set by parameterisation.
$I^2 h$ (Cu)	Ampere square hours (with $R_{Cu} = 1 \Omega$)
$U^2 h$ (Fe)	Voltage square hours (with $R_{Fe} = 1 M\Omega$)

1.5.5 Summation Channels

The values of two measurement quantities (incl. pulse inputs EX1 and EX2) can be added. The added quantities must be of the same energy type (active, reactive or apparent). The sum is stored in a total energy register.

Energy registers which contain the summation of two measured quantities (summation channels) cannot be used for tariffication.

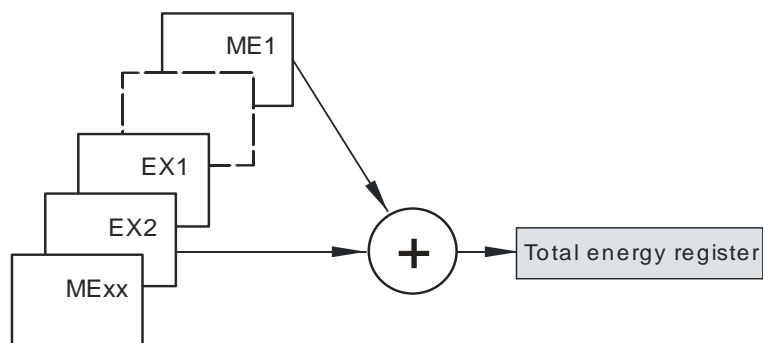


Fig. 1.19 Summation channels

1.6 Data Profile

A non-volatile memory (FLASH memory) contains the data of:

- the stored value profile
- the load profile 1
- the load profile 2 (optional)
- the event log
- the three groups of dedicated event logs

The flash memory stores data without data loss in case of voltage failures. No battery is required for this purpose.

The total size of the available memory for the stored billing value profile, the load profile(s), the event log and the dedicated event logs is 1.8 MB.

1.6.1 Stored Value Profile

At the end of the billing period, the meter stores the current value of the registers to the stored value profile. Which energy registers and/or demand registers are stored to the stored billing value profile can be selected by parameterisation.

Memory organisation The stored value profile is organised as a circular buffer, i.e. the oldest entry will be overwritten by the most recent entry. The memory capacity which is available for the stored value profile depends on parameterisation.

1.6.2 Load Profile 1 and Load Profile 2 (option)

The load profiles are used to save the values of various registers at regular intervals. The measured values that are captured in the load profile can be selected by parameterisation.



Load profile 2 is optional

The second load profile is optional and can be activated by parameterisation.

Profile 1 The first load profile is generally used for billing purposes. Its capture period has a range of 1...60 min. This load profile may also contain instantaneous values and detailed status information for data processing in central stations.

Profile 2 The second load profile can be used to store instantaneous values over a period which differs from the period of the first load profile. Apart from the differing capture period, the second load profile is identical with the first load profile.

Memory organisation The load profile is organised as a circular buffer, i.e. the oldest entry will be overwritten by the most recent entry. The memory capacity which is available for the load profile(s) depends on parameterisation. If both load profiles are activated, they share the memory capacity which is allocated to the load profile(s).

1.6.3 Event Log

Events that occur sporadically are stored in the event log. The user may select which events trigger an entry in the event log. The event log is used to analyse the behaviour of the network as well as to supervise the correct function of the meter.

Memory organisation

In the event log, a maximum of 500 event entries can be stored. The individual entries consist of the time stamp and the event number. Additional information such as the error register or energy total registers can also be stored with every event.

The event log is organised as a circular buffer, i.e. the oldest entry will be overwritten by the most recent entry.

Dedicated event log

Network quality events, can be stored in the dedicated event log. The dedicated event log consists of three groups of logs.

- Overvoltage events
- Undervoltage events
- Missing voltage events

In the dedicated event logs, important information can be stored per entry such as:

- duration of the events
- extreme values of the events (not for missing voltage).
- instantaneous values
- maximum three energy registers

Additional information can be read from the header of the event logs, such as the longest entry, the shortest entry, the total number of occurrence and the total duration of the event.

Memory organisation

The dedicated event logs are organised as circular buffers, i.e. the oldest entry will be overwritten by the most recent entry.

List of events

The table below lists all events which can be captured in the event log. Depending on the parameterisation, some events may never occur.

Events which can be stored in the dedicated event log are marked in the corresponding column.

Number	Event	Entry in dedicated event log possible
2	All energy registers cleared	
3	Stored values and/or load profile cleared	
4	Event log profile cleared	
5	Battery voltage low	
7	Battery ok	
8	Billing period reset	
9	Daylight saving time enabled or disabled	
10	Clock adjusted (old time/date)	
11	Clock adjusted (new time/date)	

Number	Event	Entry in dedicated event log possible
12	Status of control input changed to OFF	
13	Status of control input changed to ON	
17	Undervoltage L1	x
18	Undervoltage L2	x
19	Undervoltage L3	x
20	Overvoltage L1	x
21	Overvoltage L2	x
22	Overvoltage L3	x
23	Power down	
24	Power up	
25	Overcurrent L1	
26	Overcurrent L2	
27	Overcurrent L3	
28	Overcurrent neutral	
31	Power factor monitor 1	
32	Power factor monitor 2	
33-40	Demand monitors 1-8	
45	Error register cleared	
49	Missing voltage L1	x
50	Missing voltage L2	x
51	Missing voltage L3	x
55	Current without voltage L1	
56	Current without voltage L2	
57	Current without voltage L3	
58	Missing additional power supply	
59	All registers and profiles cleared	
66	Invalid clock	
74	Backup memory access error	
75	Measuring system access error	
76	Time device access error	
77	Load profile memory access error	
79	Communication unit access error	
80	Display board access error	
83	Parameter checksum error	
84	Load profile checksum error	
85	Stored values checksum error	
86	Event log checksum error	
87	Calibration data checksum error	

Number	Event	Entry in dedicated event log possible
88	Load profile 2 checksum error	
89	Invalid power down	
93	Expired watchdog	
94	Communication locked	
96	Wrong extension board identification	
104	Count registers cleared	
106	Alert occurred	
124	Compensation values changed	
128	Energy total and rate register cleared	
134	DC Field detected ON	
188	DC Field detected OFF	
193	Load profile 2 cleared	

1.7 Communication

The ZMD400xT meters have an optical interface for local communication via a readout head and a wide range of communication interfaces which can be inserted in the meter.

1.7.1 Optical Interface

The optical interface to IEC 62056-21 is a serial, bi-directional interface. It is situated at top right on the main face plate (see also chapter 3 "Mechanical Construction") and serves:

- for automatic local data recording by means of a suitable acquisition unit (hand-held terminal) (see section 5.7 "Data Readout")
- for performing service functions, e.g. to input formatted commands (see section 5.8 "Input of Formatted Commands")
- as "optical key", i.e. as receiver of a light signal, e.g. generated by a flashlight acting like the "down" display key (see also section 5.2.2 "Control of Display via Optical Interface")
- for communication with a Landis+Gyr MAP110 service tool or a Landis+Gyr MAP120 parameterisation tool.

1.7.2 Communication Units

The communication units which can be inserted in the meter can be used:

- for **remote reading** and for **remote tariff control** of meters (RS232, RS485, CS, M-Bus, PSTN modem, GSM modem, GPRS modem, Ethernet, etc.) or
- for **recording metering pulses** for other physical media, such as water, gas or heat (S0 interface).

Access via the communication interfaces is protected for specific access levels using the meter security system by means of passwords. If the monitoring is activated by corresponding parameterisation, communication is inhibited for a selected time (max. 24 h) after a selected number of password attempts with an incorrect password (max. 15). Monitoring takes place independent of all access levels with password protection and for the IEC W5 password.

The communication devices are accommodated in an easily exchanged communication unit, which is plugged in behind the front door of the meter and secured by a utility seal (see also chapter 3 "Mechanical Construction"). It can be fitted and removed at any time in the field without touching the certification seal. Landis+Gyr recommend exchanging communication units only if the meter is separated from the network and switched off.

An initial fitting as well as retrofitting without re-parameterisation of the meters is possible with any version of communication unit. For fitting and removal of the already parameterised communication units, the installation personnel do not require any special knowledge of communications. Modern plug connections ensure a rapid and faultless connection of the communication units.

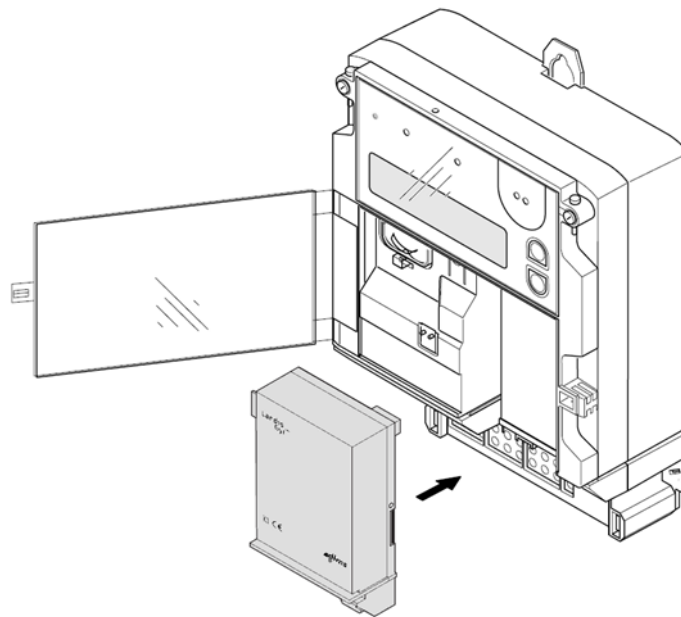


Fig.1.20 Simple fitting of the communication unit

Versions of communication units

Communication units (CU) are available in various versions. The document "Overview of Communication Applications", H 71 0200 0144 contains a list of all currently available CU-interfaces with explanations.

Further information sources

More detailed information about Landis+Gyr Dialog communication solutions can be found in the following documents.

- **Technical data** for the various communication units
- **User manuals** for the various communication units
- Detailed **application notes** for numerous reference applications with various communication units for different transmission media:
 - Point-to-point Connection with internal PSTN Modem Mx (H 71 0200 0146 en)
 - Point-to-point Connection with internal GSM Modem Gx (H 71 0200 0147 en)
 - etc.

All these documents as well as advisory services are available from authorised Landis+Gyr representatives.

1.8 MAP Software Tools

There are two software tools available for parameterisation of the E650 meter and for communication with the meter: MAP110 and MAP120

Areas of application

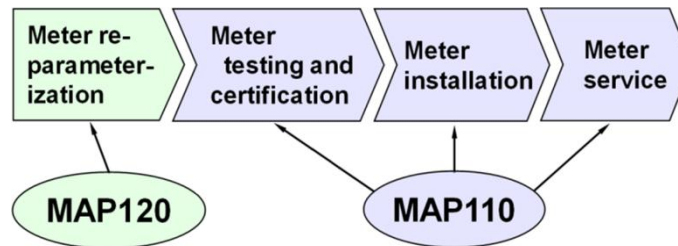


Fig. 1.21 Application of MAP software tools

MAP110

The MAP110 Service Tool covers all the following applications normally required for meter installation and in the service sector:

- Billing data readout
- Readout and export of profiles (load profile(s), stored values and event log, dedicated event logs)
- TOU (Time of Use) readout and modification
- Billing period reset
- Register and profile resets
- Setting of certain parameter ranges such as primary data, time switch etc.
- Communication input settings
- Communication settings for Landis+Gyr communication units readout and modification
- GSM installation aid for Landis+Gyr communication units (field strength indicators, telephone number information, PIN-code handling)
- Test SMS message transmission
- Analysis and diagnostic functions

MAP120

The Landis+Gyr MAP120 software is used to reparameterise the meter and the communication unit, i.e. it is possible to read out and modify all device parameters.

In contrast to communication devices from other manufacturers, no additional software and training costs are incurred by the use of Landis+Gyr CUs, since the MAP software tools support both meters and communication units.

1.9 Anti-Tampering Features

The following anti-tampering features are now available for ZxD400xT meters:

- DC magnet detection for the detection of strong magnetic fields close to the meter. This feature is installed during the manufacturing process.
- Terminal cover detection for the detection of situations when the terminal cover has been opened. This feature is a retrofit option.

1.9.1 DC Magnet Detection

The meters ZMD310xT, ZxD410xT, ZxD405xT and ZxD402CT can now be ordered with a feature which detects strong dc magnetic fields. When a magnetic field is present, event 134 is set; when the magnetic field disappears, event 188 is set. These events can e.g. be entered into the event log with date and time. The meter's type description informs you whether this feature has been implemented (see 8).

1.9.2 Terminal Cover Detection

Installed ZMD400 meters can be equipped with a terminal cover detection unit. For this, they need to be parameterised and the unit – consisting of a switch which detects the removal of the terminal cover – has to be installed. It can be ordered from Landis+Gyr, part number 74 766 0163 0.

Whenever the terminal cover is removed, the terminal cover detection detects the switch status change via control input 1 and enters event 13 in the event log with date and time. When the terminal cover is mounted again, event 12 is entered in the event log with date and time.

Please order terminal cover detection units (minimum order quantity 10) from:

Landis+Gyr AG
Service & Repair
Feldstrasse 1
CH-6301 Zug
Switzerland

For installation of the unit see section 4.6 "Installation of Terminal Cover Detection" on page 55.

2 Safety

This section describes the safety information used in this manual, outlines the responsibilities and lists the safety regulations to be observed.

2.1 Safety Information

Attention is drawn as follows in the individual chapters of this user manual to the relevant danger level, i.e. the severity and probability of any danger:

**Definition of Danger**

For a possibly dangerous situation, which could result in severe physical injury or fatality.

**Definition of Warning**

For a possibly dangerous situation, which could result in minor physical injury or material damage.

**Definition of Note**

For general details and other useful information to simplify the work.

In addition to the danger level, all safety information also describes the type and source of the danger, its possible consequences and measures to counteract the danger.

2.2 Responsibilities

The owner of the meters – normally the utility – is responsible that all persons engaged in work with meters:

1. Are competent and qualified in accordance with national regulations (see ISSA "Guideline for Assessing the Competence of Electrically Skilled Persons").
2. Have read and understood the relevant sections of the user manual.
3. Strictly observe the safety regulations (according to section 2.3 "Safety Regulations") and the operating information in the individual chapters.

In particular, the owner of the meters bears responsibility

- for the protection of persons,
- prevention of material damage
- and the training of personnel.

Landis+Gyr AG provide training courses for this purpose on specific equipment; please contact the relevant agent if interested.

2.3 Safety Regulations

The following safety regulations must be observed at all times:

- The conductors to which the meter will be connected must not be under voltage during installation or exchange of the meter. Contact with live parts is dangerous to life. The relevant supply fuses should therefore be removed and kept in a safe place until the work is completed, so that other persons cannot replace them unnoticed.
- Local safety regulations must be observed. Installation of the meters must be performed exclusively by technically qualified and suitably trained personnel.
- Secondary circuits of current transformers must be short-circuited (at the test terminal block) without fail before opening. The high voltage produced by an interrupted current transformer circuit is dangerous to life and destroys the transformer.
- Transformers in medium or high voltage systems must be earthed on one side or at the neutral point on the secondary side. Otherwise they can be statically charged to a voltage which exceeds the insulation strength of the meter and is also dangerous to life.
- The meters must be held securely during installation. They can cause injuries if dropped.
- Meters which have been dropped must not be installed, even if no damage is apparent. They must be returned for testing to the service and repair department responsible (or the manufacturer). Internal damage can result in functional disorders or short-circuits.
- The meters must on no account be cleaned with running water or with high pressure devices. Water penetration can cause short-circuits.

2.4 Radio interference



Possible radio interference in residential environments

This meter is normally a class B product. In combination with some communication modules it can become a Class A product. In a domestic environment, this may then cause radio interference, in which case the user may be required to take adequate measures.

3 Mechanical Construction

This section describes the mechanical construction of the ZxD400xT meter and shows the most common connection diagrams.

3.1 Sealing

The internal construction of the meters is not described here, since they are protected following calibration and official certification on delivery by a manufacturer and certification seal. It is not permitted to open the meters after delivery. The front door is only secured with a utility seal and can be opened to operate the reset key, to change the battery, to exchange the tariff face plate with connection diagram or to fit or remove a communication unit (see Fig. 3.2 and separate user manuals for the communication units available).

The following drawing shows the meter components visible from outside.

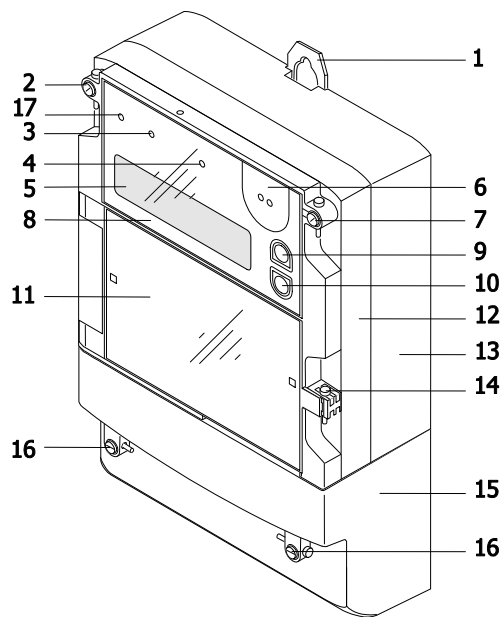


Fig. 3.1 Meter ZxD400xT

1	Combined suspension hanger (open or concealed)	10	Display key "down"
2	Screw with manufacturer seal	11	Front door tariff face plate
3	Optical test output reactive energy consumption (red), ZxD400CT only	12	Upper part of case
4	Optical test output active energy consumption (red)	13	Lower part of case
5	Liquid crystal display (LCD)	14	Utility seal for front door
6	Optical interface	15	Terminal cover
7	Screw with certification seal	16	Terminal cover screws with utility seals
8	Front section with main face plate	17	Alert LED
9	Display key "up"		

Case

The meter case is made of antistatic plastic (polycarbonate). The upper part of the case is provided with two transparent plastic viewing windows,

affording a view of the main face plate (top) and the tariff face plate (bottom). The lower part of the case is additionally glass-fibre reinforced.

Viewing window

The upper viewing window with the main face plate is secured on the upper right side with a certification seal, while the upper part of the case is secured on the upper left side with a manufacturer seal (warranty) or a second certification seal.

The lower viewing window is in the form of a hinged front door, secured with an utility seal. The tariff face plate with the connection diagram on the rear side, the battery compartment, the reset key and (if present) the communication unit are situated behind this front door.

Terminal cover

The terminal cover is available in various lengths in order to ensure the required free space for the connections.

Front door

The front door must be opened to give access to the battery compartment, reset key and tariff face plate. To fit or remove the communication unit the terminal cover must also be removed.

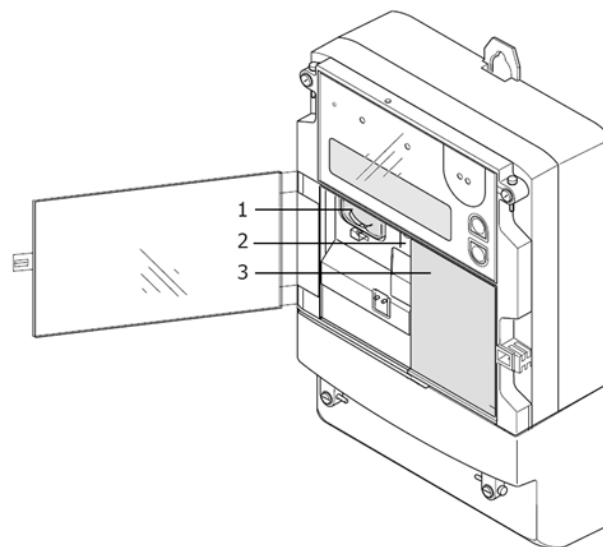


Fig. 3.2 *Meter with front door open*

- 1 *Battery compartment*
- 2 *Reset key R*
- 3 *Communication unit or dummy*

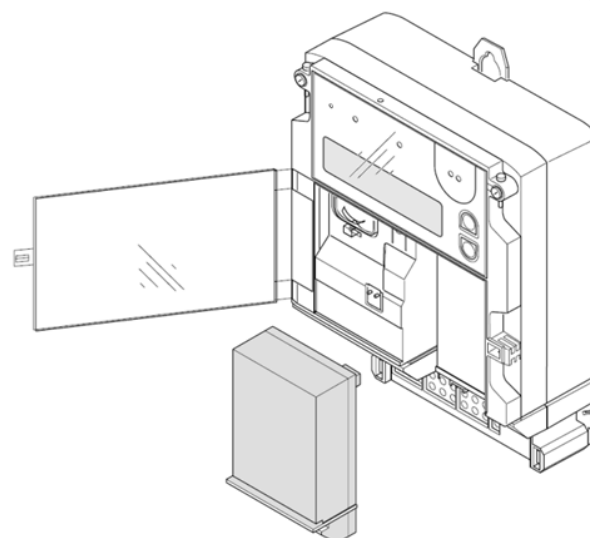


Fig. 3.3 *Meter with communication unit withdrawn*

If the meter has no communication unit, this is replaced by a dummy case.

Seal component

An additional component, which is easy to install, allows the use of a standard padlock instead of a utility seal.

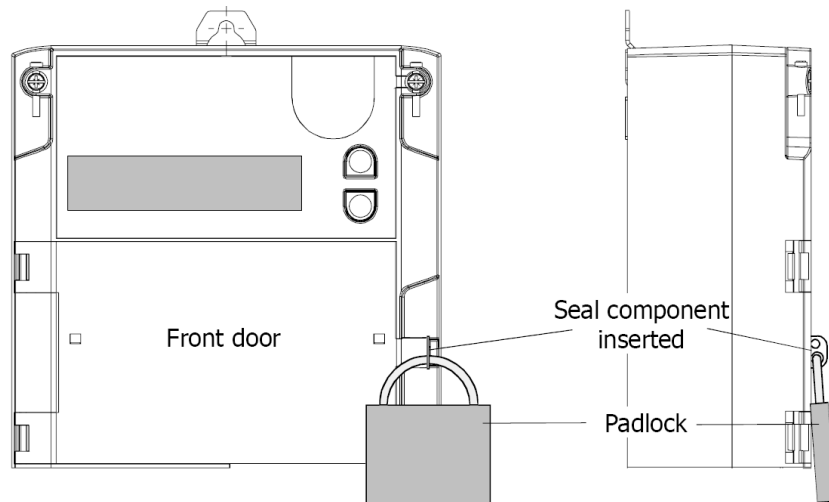


Fig. 3.4 Front door sealing using a padlock

The seal component is stowed away in a holder under the front door when not in use.

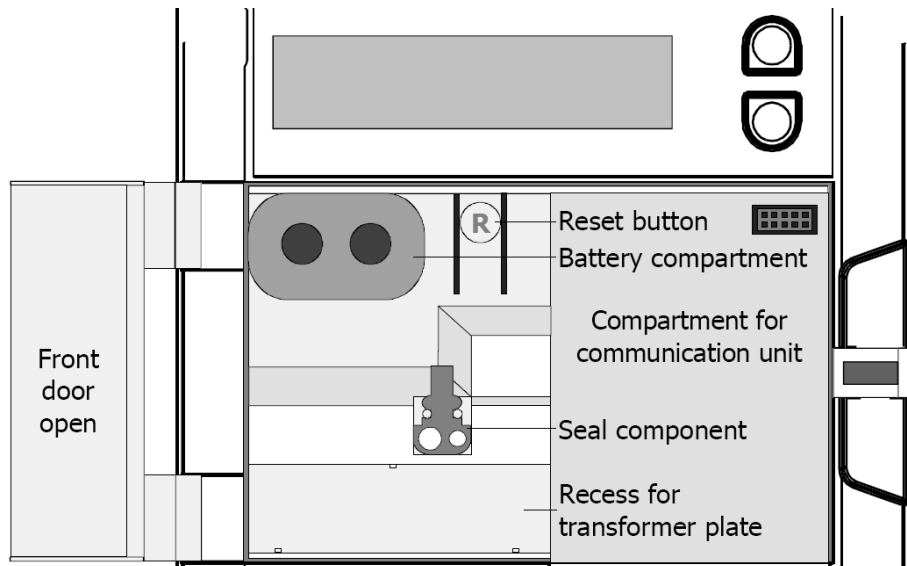


Fig. 3.5 Stowage of seal component when not in use

The seal component is installed as follows:

- Slide the seal component into the vertical slot at an angle, as shown, (position 1) until it contacts the rear wall.
- Now turn the seal component until it is horizontal and slide it down into position 2 as illustrated. The two bulges firmly fix the seal component into the lateral grooves.

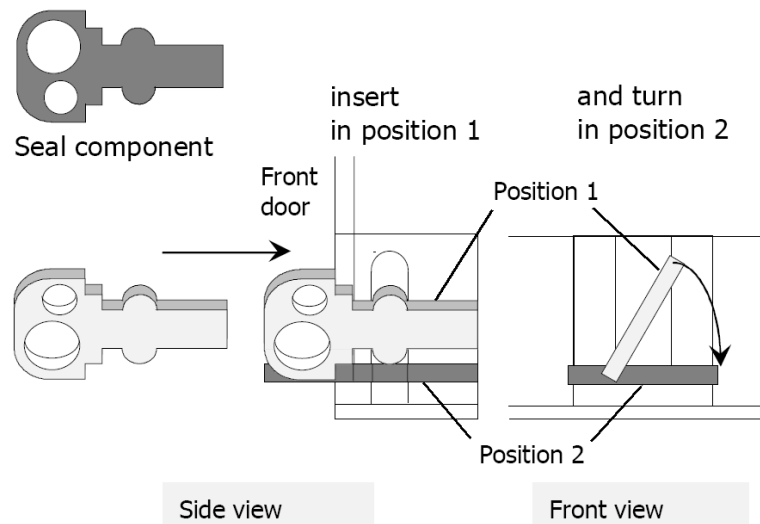


Fig. 3.6 Seal component for use with padlock

3.2 Face Plates

All relevant data for the meter are provided on the face plates inscribed according to customer specifications.

Main face plate

The main face plate is situated behind the plastic viewing window, which is secured by a certification seal. Recesses permit operation of the display keys "down" and "up" for control of the liquid crystal display.

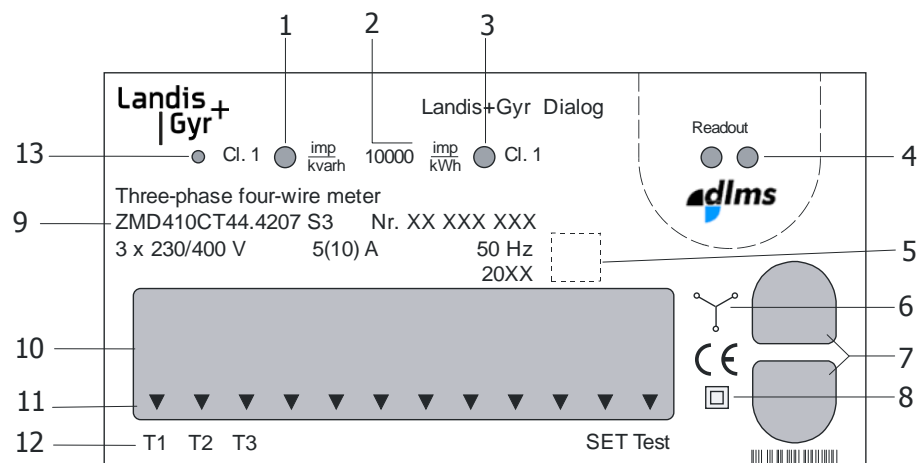


Fig. 3.7 Main face plate (example ZMD410CT)

- 1 Optical test output reactive energy (with accuracy class – ZxD400CT only)
- 2 Meter constant R1 (referred to primary values) or R2
- 3 Optical test output active energy (with accuracy class)
- 4 Optical interface
- 5 Approval symbol
- 6 Type of connection
- 7 Display key "up"/Display key "down"
- 8 Symbol for double protective insulation
- 9 Meter data (type designation, serial number, rated values, year of construction)
- 10 Liquid crystal display (LCD)
- 11 Arrows for present status indication
- 12 Status indication
- 13 Alert LED

The operating elements and displays are described more fully in chapter 5 "Operation".

Tariff face plate

The tariff face plate is placed in the front door, which can be swung out sideways to the left and is secured by a utility seal. The connection diagram of the meter is shown on the back of the face plate and is therefore visible with the front door open.

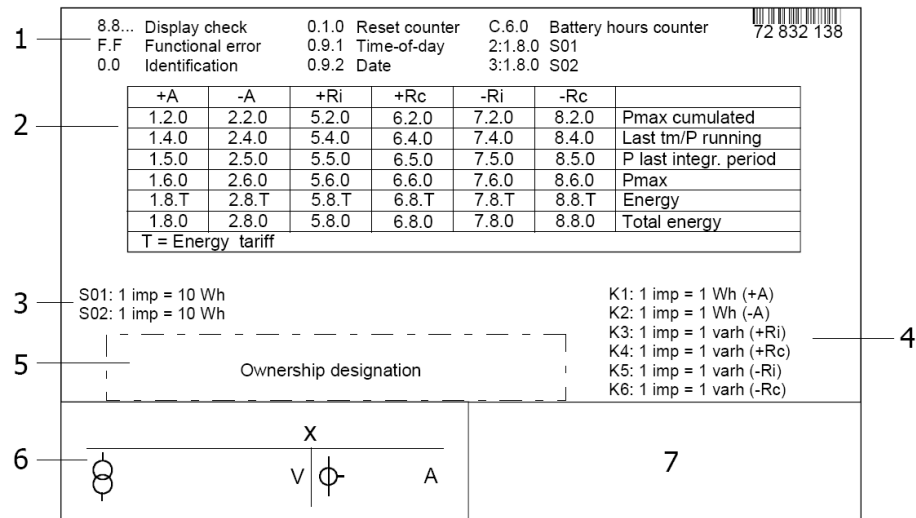


Fig. 3.8 Tariff face plate (example ZxD400CT)

- 1 General data appearing in the display
- 2 Measured quantities
- 3 Pulse input data
- 4 Output contact data
- 5 Ownership designation
- 6 Transformer data and readout factor
- 7 Communication unit data (if present)

3.3 Connections

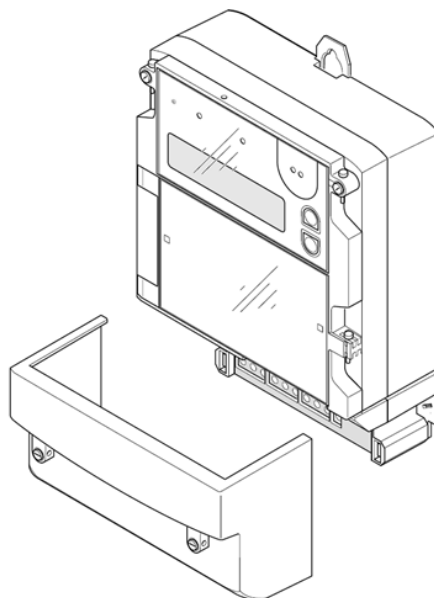


Fig. 3.9 Meter with terminal cover removed

The terminal block with all meter connections is situated behind the terminal cover. Two utility seals in the fixing screws of the terminal cover prevent unauthorised access to the phase connections and therefore also prevent unrecorded energy consumption.

Terminal layout (example ZMD400xT)

The top row of terminals (level 1) consists of spring-loaded terminals and comprises

- Extension board terminals on the left

Depending on the version, up to 4 control inputs or 6 output contacts or a combination of these with maximum 6 inputs and outputs, or voltage connections for a separate supply.

- Communication unit terminals on the right

The centre row of terminals (level 0) likewise consists of spring-loaded terminals and comprises:

- Voltage outputs U1, U2, U3 and N, tapped from the relevant phase input
- 3 fixed control inputs with a common return line G (electrically isolated)
- 2 output contacts for transferring fixed valency pulses or control signals (electrically isolated)

The lower row of terminals comprises the phase connections with input and output of the circuit for each phase with the voltage connection in between and neutral conductor.

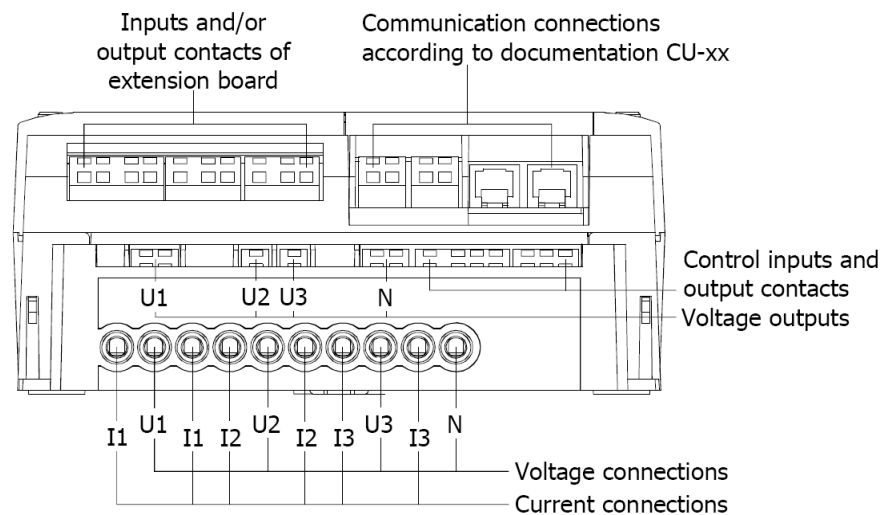


Fig. 3.10 Terminal layout ZMD400xT according to DIN

Apart from the common terminal layout according to DIN the ZMD400 meters are also available optionally with symmetrical terminal layout.

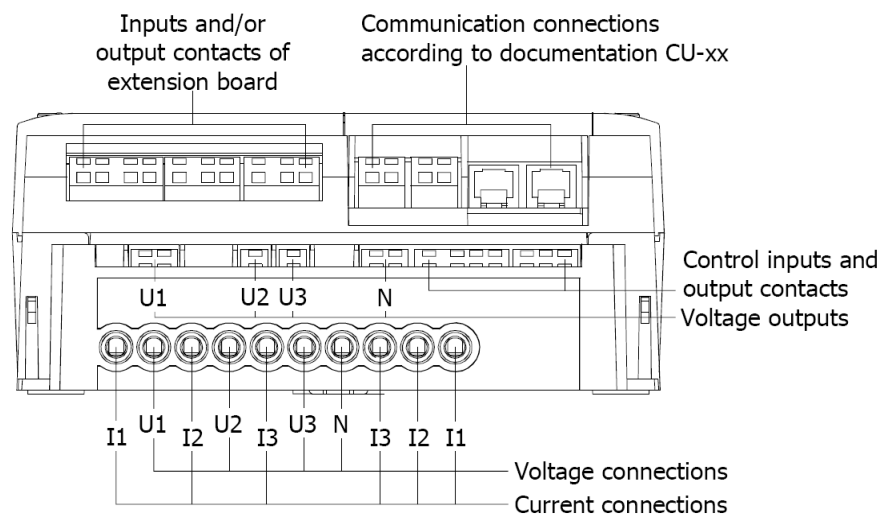


Fig. 3.11 Symmetrical terminal layout ZMD400xT

3.4 Connection Diagrams (Examples)



Binding connection diagrams

The following connection diagrams should be considered examples. The connection diagrams provided at the rear of the front door and visible when the door is open are always binding for the installation.

ZFD400xT for three-phase three-wire networks

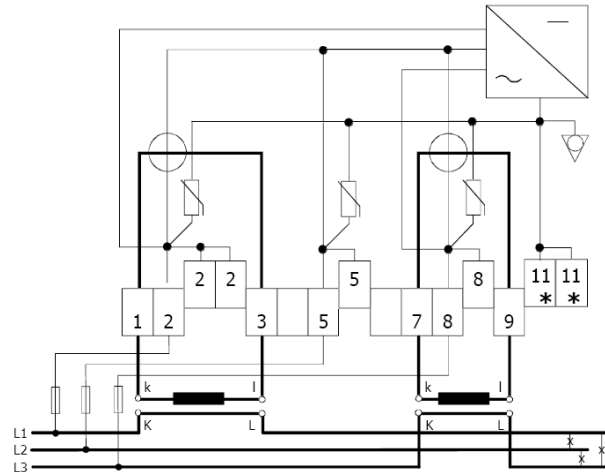


Fig. 3.12 Connection diagram of measuring unit ZFD400xT with current transformer

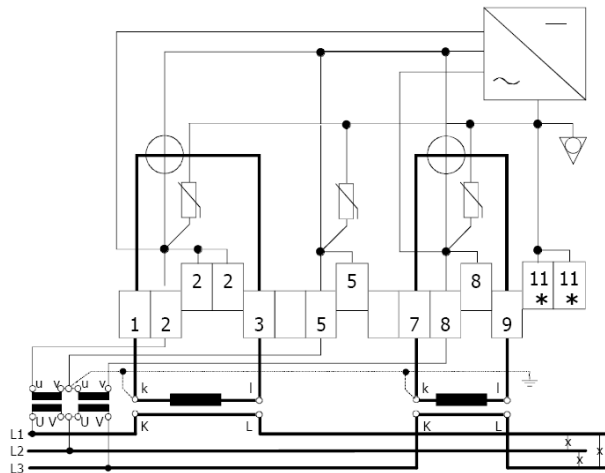


Fig. 3.13 Connection diagram of measuring unit ZFD400xT with current and voltage transformers



Symmetrical terminal layout

The version with symmetrical terminal layout (option) is available only for ZMD400 meters for three-phase four-wire networks.



Artificial star point

* With the three-wire circuit, the artificial star point (terminal 11) must not be externally wired.

ZMD400xT for three-phase four-wire networks

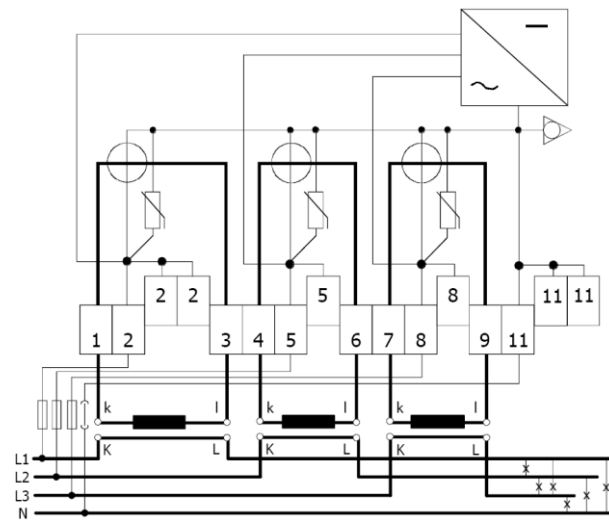


Fig. 3.14 Connection diagram of measuring unit ZMD400xT with current transformer (terminal layout according to DIN)

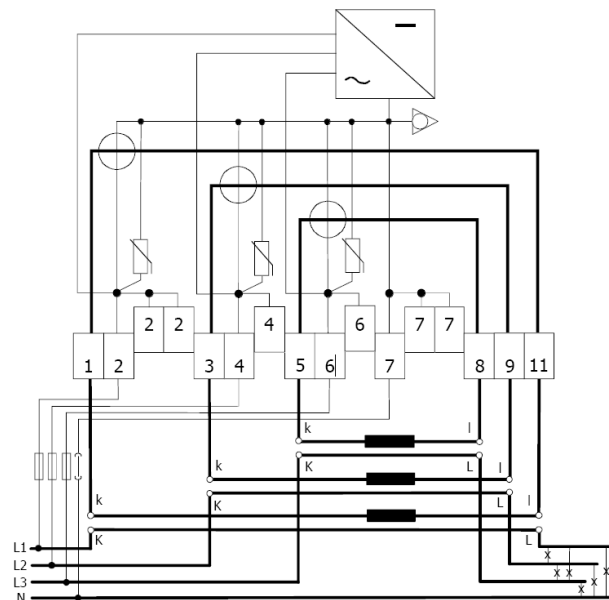


Fig. 3.15 Connection diagram of measuring unit ZMD400xT with current transformer (symmetrical terminal layout)

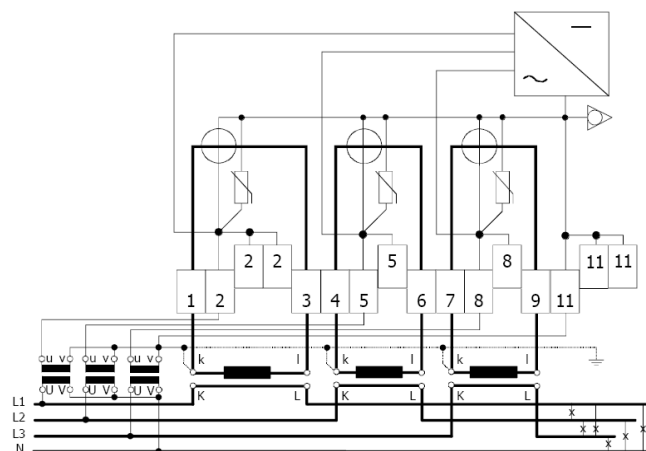


Fig. 3.16 Connection diagram of measuring unit ZMD400xT with current and voltage transformers (terminal layout according to DIN)

Control inputs / output contacts

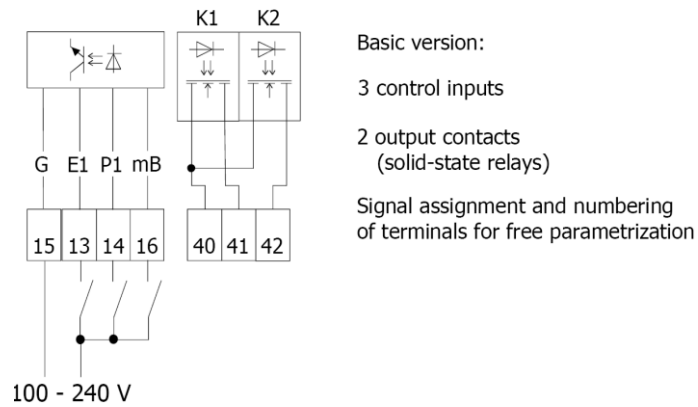


Fig. 3.17 Connection diagram fixed control inputs/output contacts

Extension board 4200

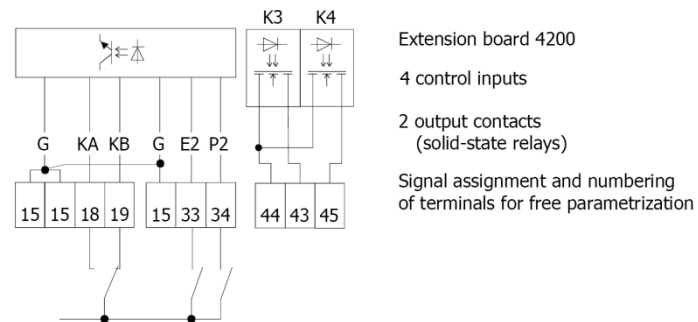


Fig. 3.18 Connection diagram extension board with 4 control inputs and 2 output contacts

Extension board 2400

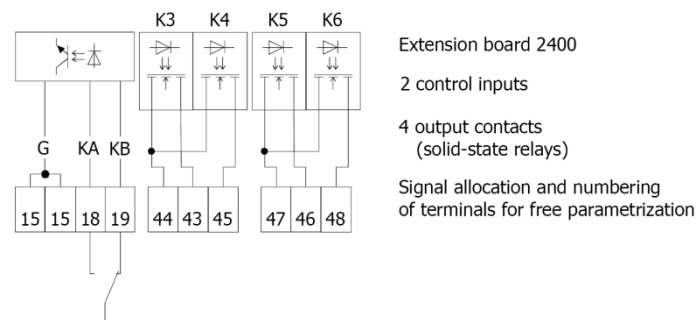


Fig. 3.19 Connection diagram extension board with 2 control inputs and 4 output contacts

Extension board 0600


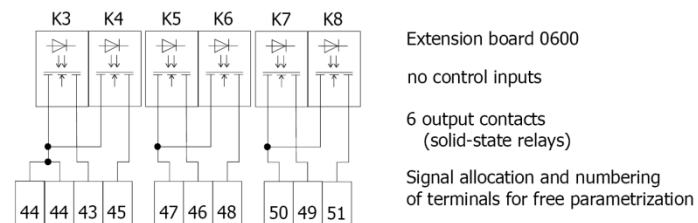


Fig. 3.20 Connection diagram extension board with 6 output contacts


Extension board 0450

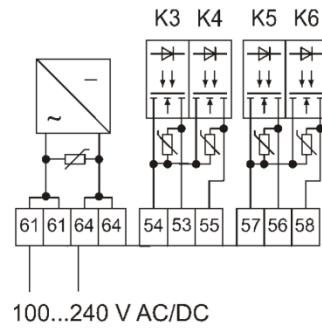

Extension board 0450
with auxiliary power supply
no control inputs
4 output contacts (solid state)

Fig. 3.21 Connection diagram extension board with auxiliary power supply and 4 output contacts

Extension board 0460

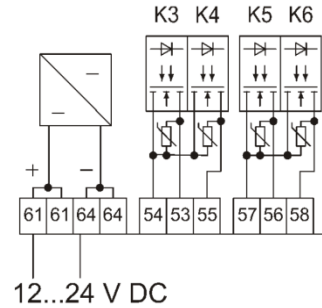

Extension board 0460
with auxiliary power supply
no control inputs
4 output contacts (solid state)

Fig. 3.22 Connection diagram extension board with auxiliary power supply and 4 output contacts



Ground terminal connection

Please note that the Ground terminal (G) of the control inputs on the extension boards is NOT internally connected to the Ground terminal on the base. If the Ground level is the same, then an external wire must be connected between the two Ground terminals.

3.5 Dimensions

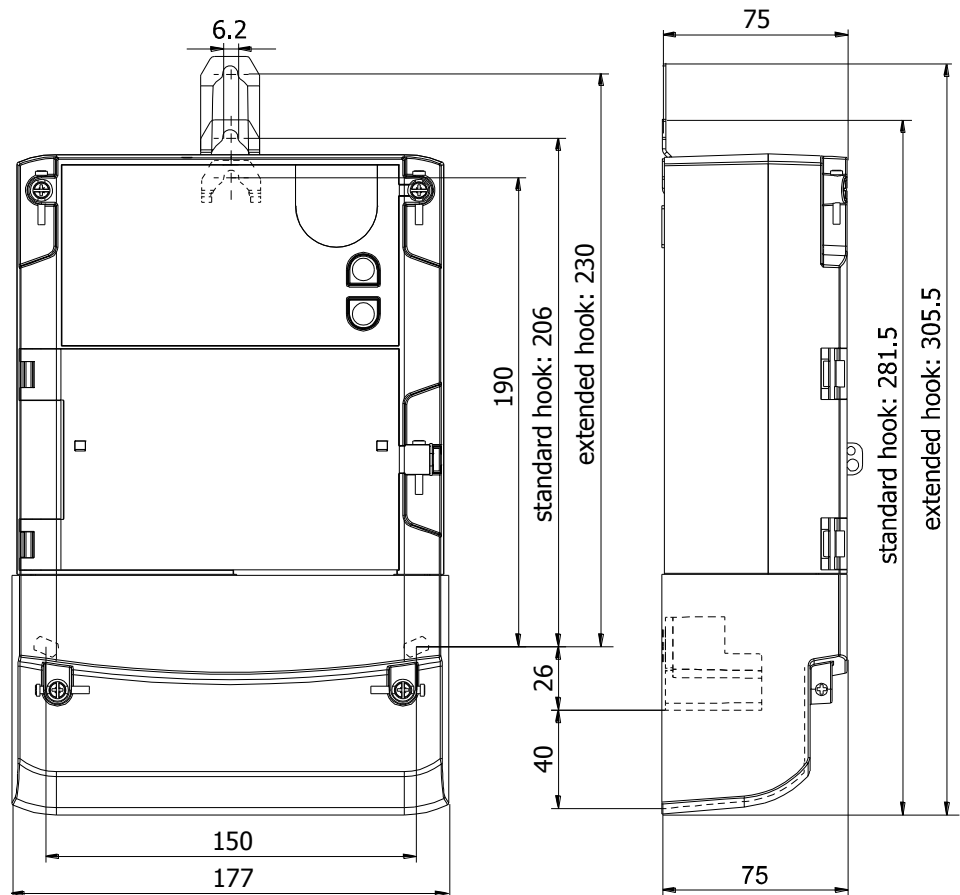


Fig. 3.23 Meter dimensions (Standard terminal cover)

4 Installation and De-Installation

This chapter describes the installation and connection of meters for transformer connection. In addition, the necessary steps for checking the connections, commissioning of the meter and the final functional check are described as well as the de-installation.



Dangerous voltage

Dangers can arise from live electrical installations to which the meters are connected. Touching live parts is dangerous to life. All safety information should therefore be strictly observed without fail.

4.1 Basic Information for Connecting Meter

It is recommended to use the following circuits whenever possible for connecting the meter to the various voltage levels.



Terminal layout

In the following illustrations the terminal layout is shown according to DIN. For the version with symmetrical terminal layout, which is optionally available for ZMD400 meters for three-phase four-wire networks, the different terminal numbers according to the connection diagram must be observed.

4.1.1 Connection to Low Voltage with Current Transformers

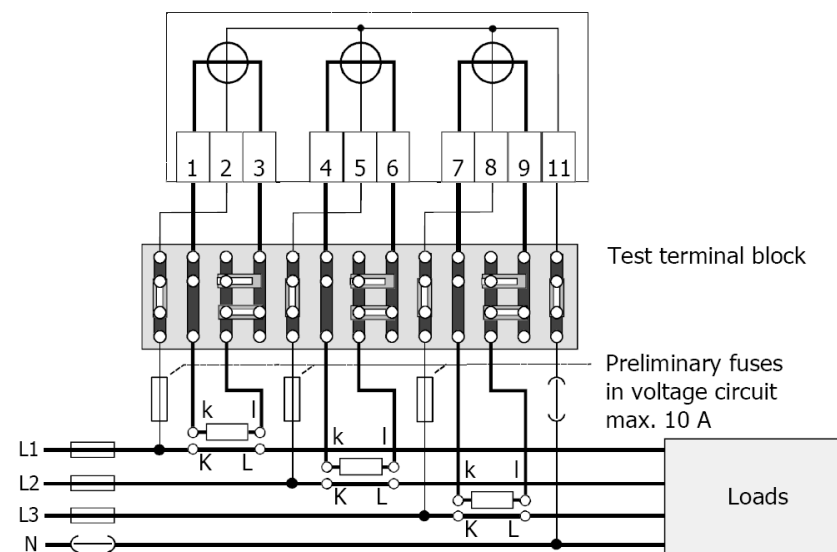


Fig. 4.1 Connection to low voltage with current transformers

Test terminal block

The secondary circuit of a current transformer must always be closed when current is flowing in the primary. Opening of the secondary circuit can destroy the transformer. The test terminal block shown in Fig. 4.1 allows the secondary circuits to be short-circuited and the voltage circuits to be opened in order to exchange the meter without interrupting operation.

Preliminary fuses

The preliminary (supply) fuses in the voltage circuit (max. 10 A) protect against short-circuits in the measuring circuit. The voltage circuits are connected directly to the primary and would only be protected by the main fuses of 100 A or more if the preliminary fuses were not fitted. A short-circuit would certainly destroy the measuring device.

4.1.2 Connection to Medium and High Voltage (Aron Circuit)

This circuit is used above all in the medium voltage range (3 to 30 kV) and rarely with high voltage (from 30 kV).

It is also recommended here to insert a test terminal block between transformer and measuring device (meters and others). This permits simple exchange without interrupting operation. On the other hand, no preliminary supply fuses are necessary in the voltage circuits, since the voltage transformers cannot produce a high short-circuit capacity on the secondary side.

Earthing

On medium and high voltage the secondary side of all voltage transformers should be earthed for safety reasons. Otherwise potentials could develop, which could result in dangerous contact voltages.

Three-phase three-wire meter

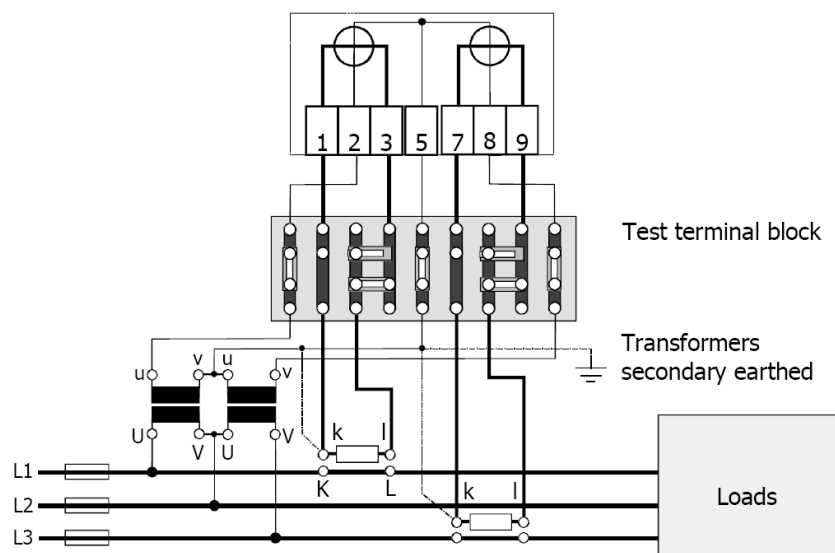


Fig. 4.2 Connection to medium and high voltage (Aron circuit)

Instead of the three-phase three-wire meter ZFD400 the power supply company can also use a three-phase four-wire meter ZMD400. The following two connections are then possible:

- with 2 voltage transformers and open star point at the meter
- with 3 voltage transformers and star point connected at the meter

Three-phase four-wire meter (with open star point at meter)

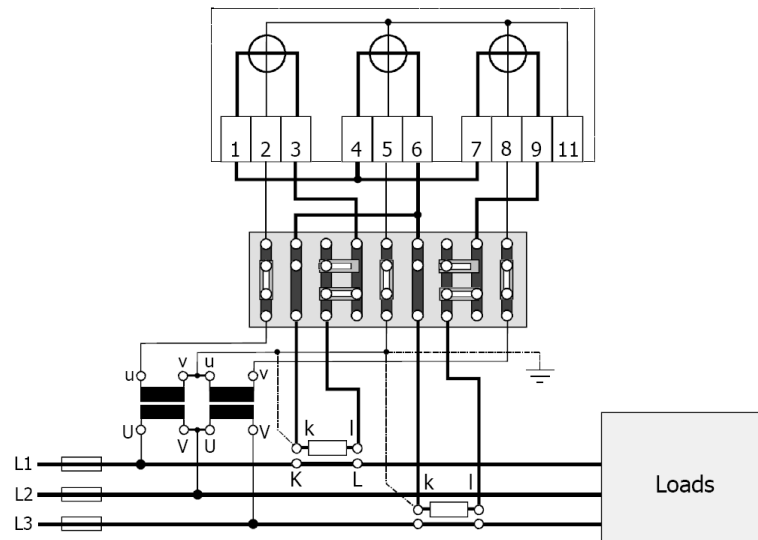


Fig. 4.3 Connection to medium and high voltage four-wire meter with open star point

Three-phase four-wire meter (with star point connected at meter)

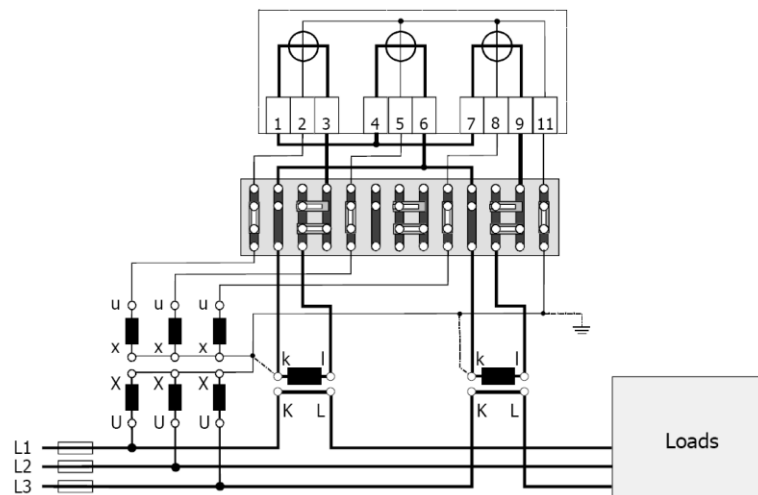


Fig. 4.4 Connection to medium and high voltage four-wire meter with star point connected

4.1.3 Connection to Medium and High Voltage (Three-Phase Four-Wire Circuit)

This circuit is mainly used with high voltage (from 30 kV). The same conditions then apply as for the Aron circuit.

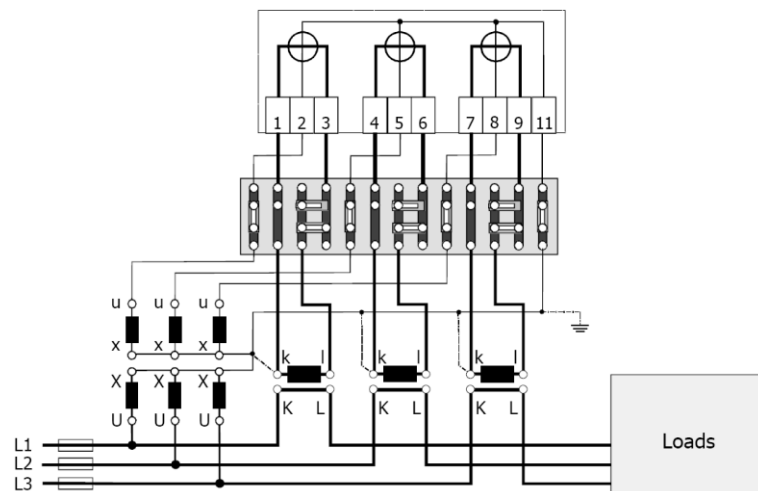


Fig. 4.5 Connection to medium and high voltage (three-phase four-wire circuit)

4.2 Mounting the Meter



Dangerous voltage on conductors

The connecting conductors at the point of installation must be voltage-free for installation of the meter. Contact with live components is dangerous to life. The relevant supply fuses should therefore be removed and kept in a safe place until finishing work, so that they cannot be re-inserted by other persons unnoticed.

The jumpers in the voltage connections must also be opened at the test terminal block (e.g. TVS14). For this purpose, release the screw of the relevant jumper with an insulated screwdriver, move the jumper away from the terminal on the meter side and then re-tighten the screw.

If no test terminal block is available, the primary voltage must be interrupted, i.e. the system switched off.



Dangerous voltage on current transformers

The current transformer secondary circuits must not be opened when current is flowing in the primary. This would produce a dangerous voltage at the terminals of several thousand volts and the insulation of the transformer would be destroyed.

To install the meter, short-circuit the secondary of the current transformer at the test terminal block (e.g. TVS14). For this purpose, release the screw of the relevant short-circuiting jumper with an insulated screwdriver, move the jumper away over the terminals on the meter side and then re-tighten the screw. The circuit on the meter side can then be opened without danger.

If no test terminal block is available, the primary voltage must be interrupted, i.e. the system switched off.

When you have identified the correct meter position for mounting the meter, it should be mounted as follows on the meter board or similar device provided for this purpose:

1. Determine the desired form of fixing (open/covered meter mounting or extended suspension hook for 230 mm suspension triangle height). If holes for a suspension triangle height of 230 mm are already present, use the **optional extended suspension hook** depicted below. This hook can be ordered with the part number 74 109 0072 0 (minimum order quantity 50) from:

Landis+Gyr AG
Service & Repair
Feldstrasse 1
CH-6301 Zug
Switzerland

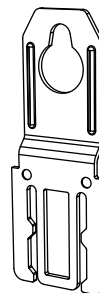


Fig. 4.6 Extended suspension hook

4. Either set the meter suspension hook in the relevant position as shown below or replace the suspension hook with the extended hook by lifting the latch slightly and pulling out the shorter hook. Insert the extended hook into the grooves in the same way the shorter hook was inserted (bent towards rear) and push it down until it clicks into place.

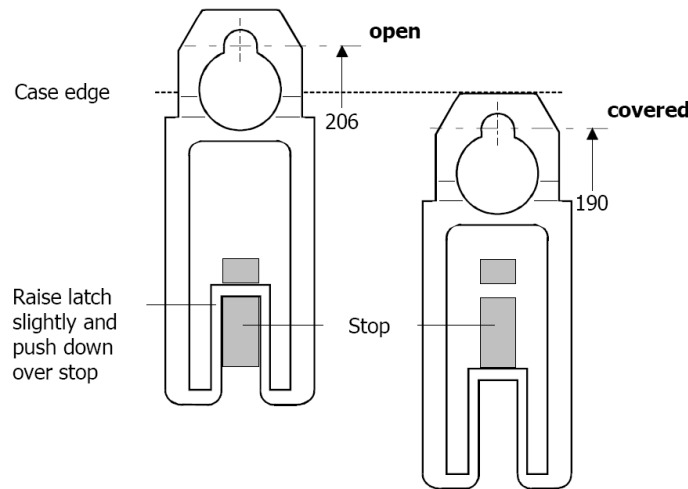


Fig. 4.7 Positioning of meter suspension eyelet

5. Check with a phase tester or universal measuring instrument whether the connecting wires are live. If so, remove the corresponding supply fuses and keep them in a safe place until installation is completed, so that they cannot be replaced by anyone unnoticed. Open the voltage connections at the test terminal block with an insulated screwdriver and check whether the short-circuit jumpers of the circuit are closed.
6. In case there are no holes provided, e.g. as in the case with the 230 mm suspension triangle: Mark the three fixing points (suspension triangle as in following illustration) on the mounting surface provided:
 - horizontal base of suspension triangle = 150 mm
 - height of suspension triangle for open mounting = 206 mm
 - height of suspension triangle for covered mounting = 190 mm

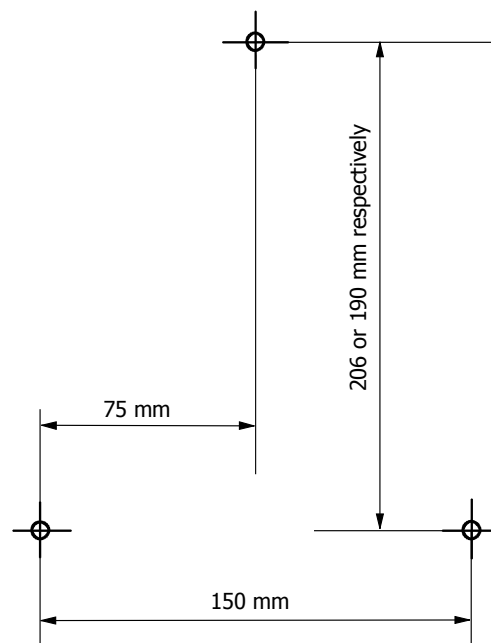


Fig. 4.8 Drilling plan

7. Drill the three holes for the fixing screws.
8. Unscrew the meter terminal cover.
9. Fit the meter with the three fixing screws on the mounting surface provided.

4.3 Connecting Meter



Dangerous voltage on conductors

The connecting conductors at the point of installation must be voltage-free for installation of the meter. Contact with live components is dangerous to life. The relevant supply fuses should therefore be removed and kept in a safe place until finishing work, so that they cannot be re-inserted by other persons unnoticed.

The jumpers in the voltage connections must also be opened at the test terminal block (e.g. TVS14). For this purpose release the screw of the relevant jumper with an insulated screwdriver, move the jumper away from the terminal on the meter side and then re-tighten the screw.

If no test terminal block is available, the primary voltage must be interrupted, i.e. the system switched off.



Dangerous voltage on current transformers

The current transformer secondary circuits must not be opened when current is flowing in the primary. This would produce a dangerous voltage at the terminals of several thousand volts and the insulation of the transformer would be destroyed.

To install the meter, short-circuit the secondary of the current transformer to the test terminal block (e.g. TVS14). For this purpose release the screw of the relevant short-circuiting jumper with an insulated screwdriver, move the jumper away over the terminals on the meter side and then re-tighten the screw. The circuit on the meter side can then be opened without danger.

If no test terminal block is available, the primary voltage must be interrupted, i.e. the system switched off.

Preliminary work

It is assumed that the transformers and test terminal blocks have already been correctly fitted, the current transformers are short-circuited and the voltage connections opened.



Earthing

When using voltage transformers, the secondary star-point (or centre point in Aron circuit) of the transformer is earthed. The secondary circuits of the current transformers are also earthed one side (connection k).

Preliminary supply fuses must be used with direct voltage connection. The current transformers must not be earthed on the secondary side in this case, see connection diagram.

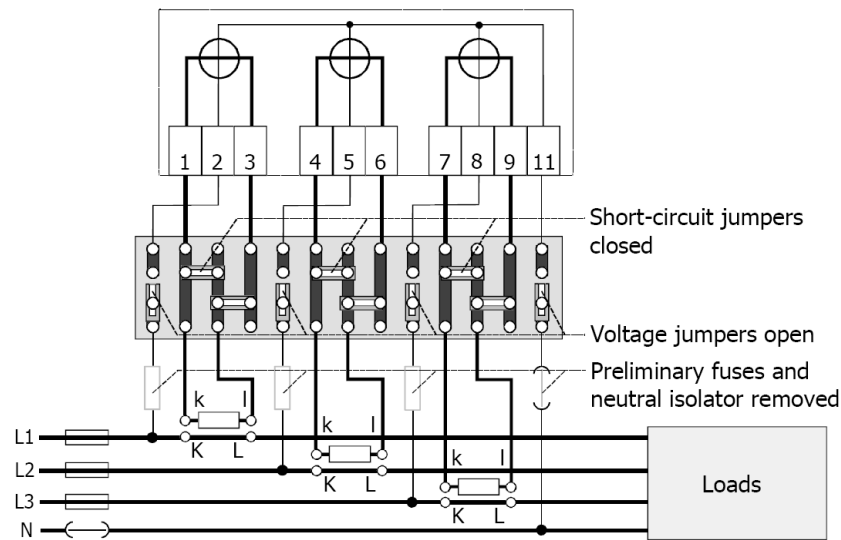


Fig. 4.9 Test terminal block status before installing the meter (terminal layout according to DIN)

Connecting

The electrical connections to the meter should be made as follows according to the connection diagram:

1. Check whether the preliminary work described above has been performed. If not, complete this work (test terminal blocks should only be touched with an insulated screwdriver).
2. Check with a phase tester or universal measuring instrument whether the connecting wires are live. If so, remove the corresponding supply fuses and keep them in a safe place until installation is completed, so that they cannot be replaced by anyone unnoticed.

Connecting the phase connection lines

1. Shorten the phase connecting wires to the required length and then strip them.
2. Insert the phase connecting wires in the relevant terminals (the terminals are numbered as shown in the connection diagram) and tighten the terminal screws firmly (torque 1.7 Nm).

It is recommended to identify the beginning and end of the relevant conductors with a suitable test unit (e.g. buzzer) to ensure that the right consumer is connected to the meter output.

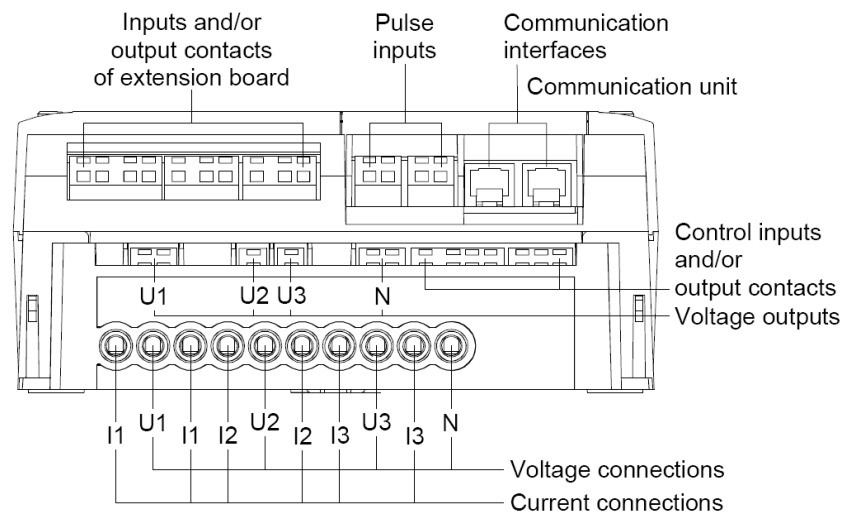


Fig. 4.10 Meter connections (example ZMD400xT, terminal layout according to DIN)



Artificial star point

With the three-wire circuit the artificial star point (terminal 11) must not be externally wired.

Connecting the signal inputs and outputs



Maximum current at auxiliary terminals

The circuits connected to the auxiliary terminals must be built in such a way that the maximum current is never exceeded, as this might damage the meter.

Maximum current of the voltage outputs: 1 A.

Maximum current of the output contacts: 100 mA.

Use fuses or protective relays between external and internal circuits to avoid defects and a possible exchange of the meter.

1. Shorten the connecting wires of the signal inputs and outputs to the required length and strip them for approx. 4 mm (wires and strands up to 2.5 mm² can be connected).
2. If stranded wire is used, it is recommended to provide it with ferrules for connection.
3. Connect the connecting wires of the signal inputs and outputs as follows to the screwless spring-loaded terminals (the terminals are numbered as shown on the connection diagram):
 - Insert a size 1 screwdriver in the upper opening and insert it turning slightly upwards (Fig. 4.11 A).
 - Now place the stripped connecting wire in the lower opening and hold it there securely (Fig. 4.11 B).
 - Withdraw the screwdriver. The connecting wire is then firmly fixed (Fig. 4.11 C).

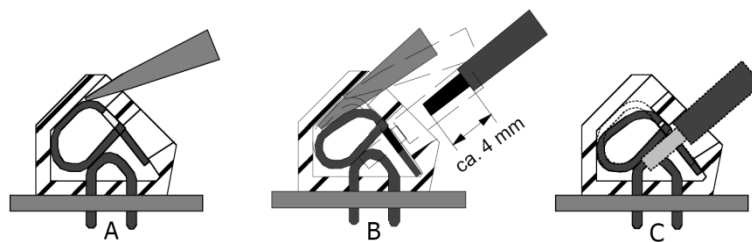


Fig. 4.11 Connection in screwless spring-loaded terminals



Bare end of connecting wire must not be too long

The insulation of the connecting line must extend as far as the terminal indentation, i.e. there must be no further bare part of the connecting line visible above the terminal edge (as shown in Fig. 4.11 C). Touching live parts is dangerous to life. The stripped part of the connecting wire should be shortened if necessary.



Only one wire or ferrule per terminal

Only one wire or ferrule with strand(s) may be connected in screwless spring-loaded terminals. The terminal could otherwise be damaged or the contact not properly made.

If a connecting wire must be disconnected again for any reason, this is performed in the reverse sequence:

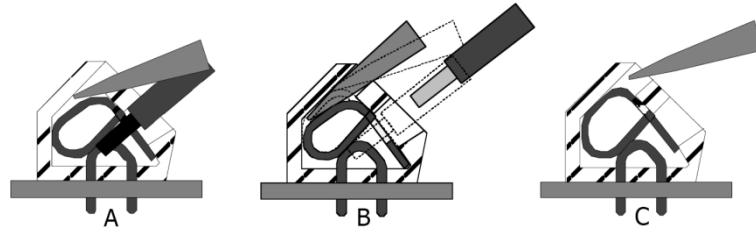


Fig. 4.12 Releasing connection from spring-loaded terminal




Damage to terminals

Never withdraw connecting wires with the terminal closed, since this could damage the terminal.

4.3.1 Connection of R-S485 Interface

If you connect the RS485 interface you must not strip back the shielded cables, e.g. to connect the individual wires to an external terminal block (see figure below), as this considerably increases the likelihood of interference.

Avoid this installation

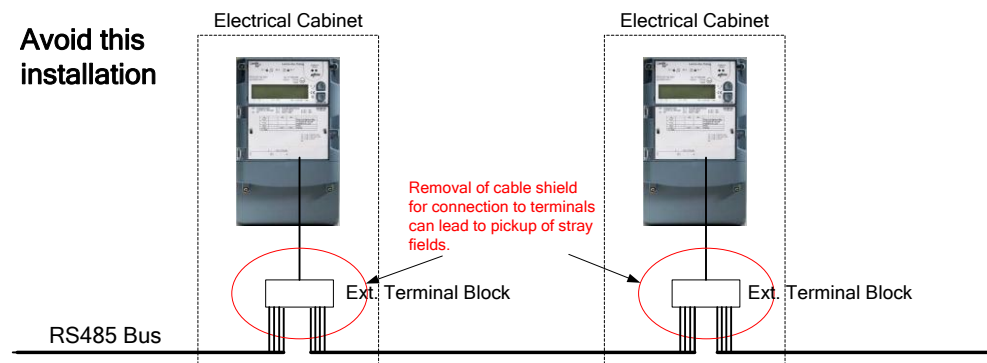

Recommended installation

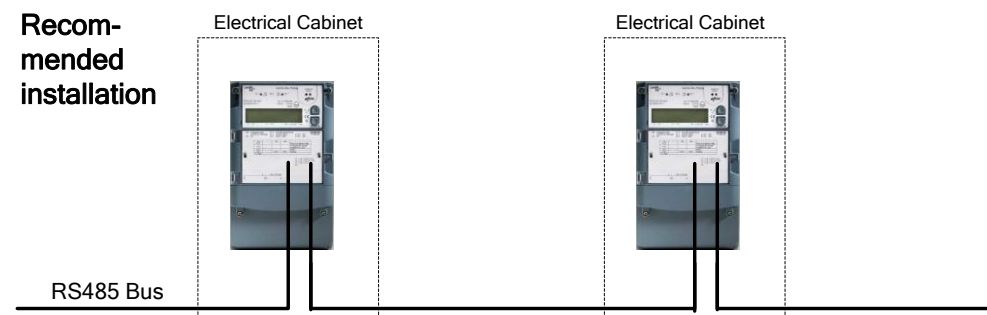


Fig. 4.13 How to connect RS485 correctly

It is also possible to use RS485 distributors instead of connecting the RS485 cables directly to the meter.

4.4 Check of Connections



Effects of connection errors

Only a properly connected meter measures correctly!

Every connection error results in a financial loss for the power company!

Before putting into operation, check again whether all meter connections are connected correctly according to the connection diagram.

4.5 Commissioning, Functional Check and Sealing



Dangerous voltage on conductors

The supply fuses must be re-inserted or the jumpers of the voltage circuits in the test terminal block re-closed before commissioning and functional check of the meter.

If the terminal cover is not screwed tight, there is a danger of contact with the connection terminals. Contact with live components is dangerous to life.

The relevant supply fuses should therefore be removed before making any modifications to the installation and these kept in a safe place until completing the work to prevent anyone re-inserting them unnoticed. The jumpers in the test terminal block of the voltage circuits should again be opened and secured.



Dangerous voltage on current transformers

The current transformer circuits must be closed before commissioning and functional check of the meter. Opening the jumpers short-circuiting the secondary sides of the transformers permit the transformer current to flow through the meter. Opening of the short-circuit jumper must never interrupt the circuit.



Prerequisites for commissioning and functional check

The functional check requires voltage to be applied and load applied to all phases. If export is possible, determine first the energy direction present.

If no network voltage is present, commissioning and functional check must be performed at a later date.

Via the test terminal blocks you can also supply the meter from suitable auxiliary sources on the secondary side with the system switched off. Repeat the functional check later with the system switched on.

The installed meter should be put into service and checked as follows:

1. Close the jumpers of the voltage paths in the test terminal block with an insulated screwdriver and re-insert the supply fuses.
2. Check on the display whether all three phases L1, L2 and L3 are indicated and show the right phase sequence.
 - If one phase is not present, the relevant symbol is absent. This is also the case if the voltage is less than 20 V.
 - With the normal phase sequence L1-L2-L3 the symbols are displayed continuously.
 - If, however, the meter is connected with reversed phase sequence (e.g. L2-L1-L3) the symbols flash. The direction of field rotation (clockwise or anticlockwise) is determined by the parameterisation. This has no influence, however, on the measuring behaviour of the meter.

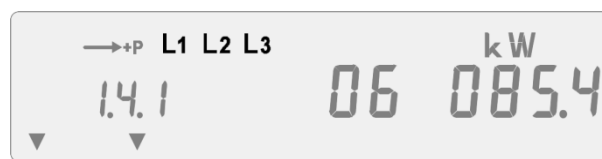


Fig. 4.14 Phase sequence indication

3. Open the short-circuit jumper of phase 1 in the test terminal block with an insulated screwdriver.
4. Check the display of the energy direction: +P to right, +Q up with inductive load.
5. Close the short-circuit jumper of phase 1 in the test terminal block again with an insulated screwdriver.
6. Repeat the same test for the other phases as in points 3 to 5.
7. Then open the short-circuit jumpers of all phases in the test terminal block with an insulated screwdriver.

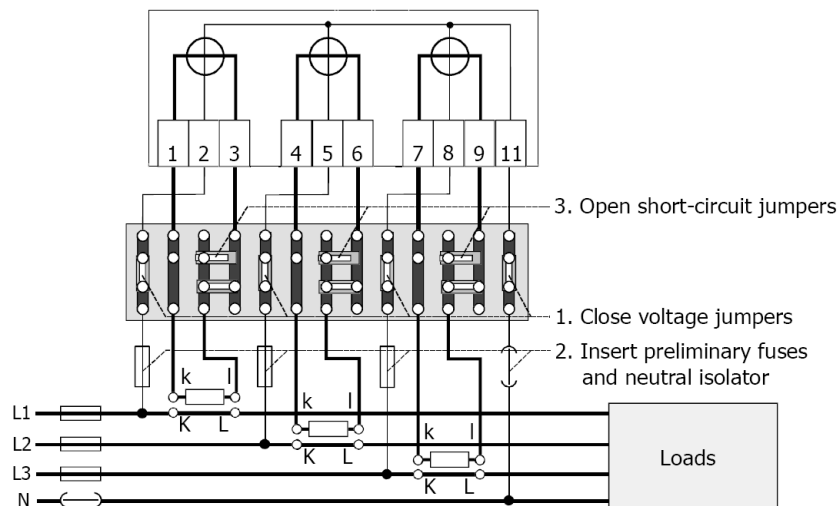


Fig. 4.15 Test terminal blocks status after commissioning (terminal layout according to DIN)

8. Check whether the operating display appears correctly (no error message).
9. Further values can be checked in the service list obtained via the service menu if parameterised: phase voltages, angles, currents, etc.

10. Check the tariff displays and switch the control voltages to the tariff inputs on and off. The arrow symbols of the tariff display must change.
11. If the meter is connected to a meter readout system via the electrical interface, a check should be made of correct functioning of the data transmission.
12. If a GSM modem is connected to the meter, the SMS transmission function should be checked by sending a test SMS message, e.g. to your own mobile telephone.
13. Screw on the terminal cover if the meter is operating correctly. Otherwise first locate and eliminate the error.
14. Seal the terminal cover with two utility seals.
15. Set the current date and time with the relevant formatted command (see section 5.8 Input of Formatted Commands) or in the set mode (see section 5.9 Changing Values in Set Mode).
16. Close the front door.
17. Re-seal the front door.

4.6 Installation of Terminal Cover Detection

1. Ensure that control input 1 has been parameterised for this function.
2. Connect cables 1 and 2 to terminal according to the figure below.

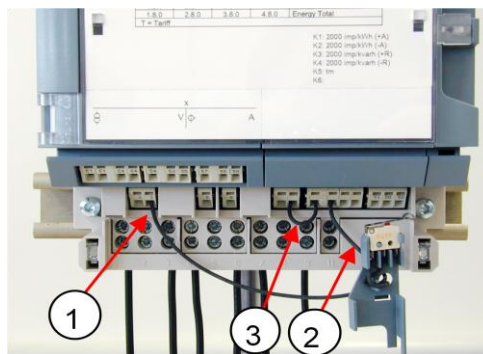


Fig. 4.16 Connection of cables of cover detection unit

3. Fix terminal cover detection unit to meter. See picture below.



Fig. 4.17 Fixing of cover detection unit to meter

4. Connect cable 3 as shown above.

4.7 De-Installation



Dangerous voltage on conductors

The connecting conductors must be free from voltage when the meter is removed. It is dangerous to life to touch live parts. Remove the corresponding supply fuses and ensure that they cannot be re-inserted by anyone unnoticed before completing the work.

If the meter is connected via voltage transformers, it must be possible to open the test terminal (e.g. TVS14). For this purpose release the screw of the relevant jumper with an insulated screwdriver, push the jumper away from the terminal and then re-tighten the screw.

If there is no test terminal block, the primary voltage must be interrupted, i.e. the system switched off.



Dangerous voltage on current transformers

The secondary sides of the current transformer circuits must not be opened if a current is flowing in the primary. This would produce an extremely high voltage of several thousand volts dangerous to life at the terminals and the insulation would be destroyed.

Short-circuit the current transformer at the test terminal block (e.g. TVS14) to remove the meter. For this purpose release the screw of the relevant short-circuit jumper with an insulated screwdriver, push the short-circuit jumper over the terminals on the current transformer side and then retighten the screw. The circuit on the meter side can then be opened without danger.

If there is no test terminal block, the primary voltage must be interrupted, i.e. the system switched off.

The meter should be removed as follows:

1. Short-circuit the current transformer with the short-circuit jumpers in the test terminal block using an insulated screwdriver and interrupt the voltage connections with the jumpers in the test terminal block.
2. Remove the two utility seals at the screws of the terminal cover.
3. Release the two screws of the terminal cover and remove it.
4. Check that the connecting wires are not live using a phase tester or universal measuring instrument. If not, check the condition of the test terminals again according to Fig. 4.18. Remove the relevant supply fuses if necessary and ensure that they cannot be re-inserted by anyone unnoticed before completing the installation.

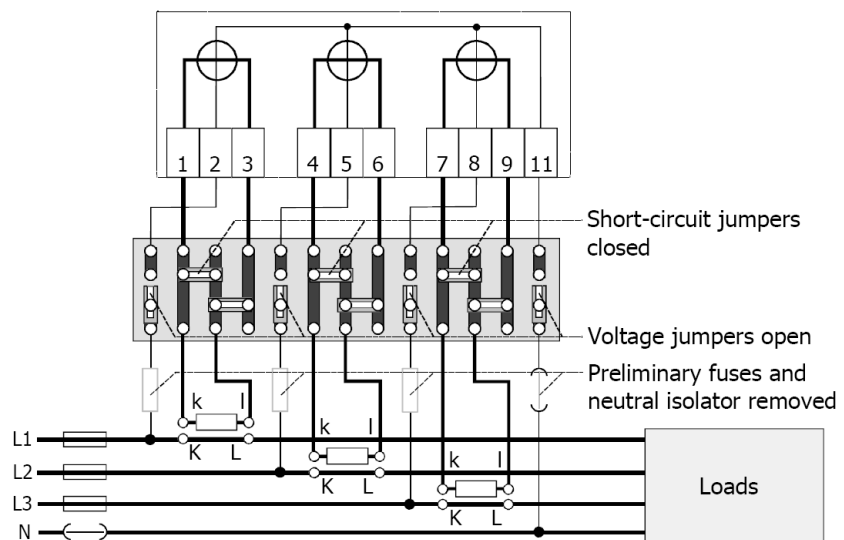


Fig. 4.18 Condition of test terminal block before removing meter (terminal layout according to DIN)

5. Remove the connecting wires of the signal inputs and outputs from the screwless spring-loaded terminals as follows:
 - Place a size 1 screwdriver in the upper opening and insert it turning slightly upwards (Fig. 4.19 A).
 - Then draw the wire from the lower opening (Fig. 4.19 B).
 - Withdraw the screwdriver (Fig. 4.19 C).

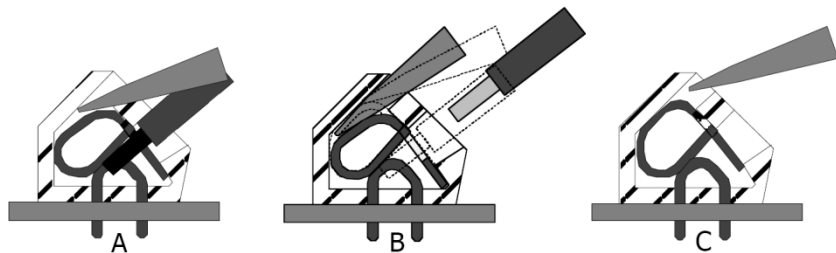


Fig. 4.19 Removing connections in screwless spring-loaded terminals



Damage to terminals

Never withdraw connecting wires from closed terminals. The terminals could be damaged.

6. Release the terminal screws 1 to 11 of the phase connecting wires with a suitable screwdriver and withdraw the phase connecting wires from the terminals.
7. Fit a substitute meter as described in section 4.3 "Connecting Meter" and the following chapters.

5 Operation

This chapter describes the appearance, layout and function of all operating elements and displays of the ZxD400xT meters as well as operating sequences.



Illustrations

The illustrations of the face plate and display in this section always show the ZxD400CT combimeter (with additional optical test output for reactive energy, together with direction of reactive power and quadrant display).

5.1 Operation with Auxiliary Power Supply

Meters equipped with an auxiliary power supply which is supplied with electricity (see section 3.4 "Connection Diagrams (Examples)") are completely functional even in case of a power cut. Despite missing voltage at the terminals they can be read out via display, remote readout etc. and parameterised, if desired.

Connect the auxiliary power supply as follows:

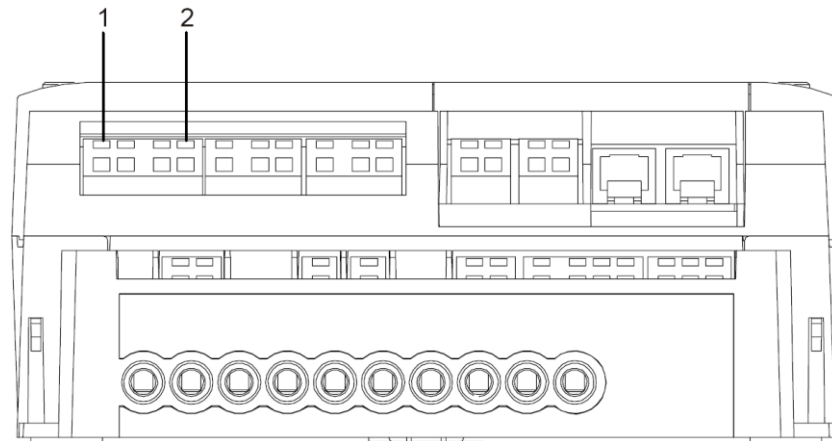


Fig. 5.1 Auxiliary power supply connections
 Type 045x: 1 and 2: 100–240 V AC/DC
 Type 046x: 1: + (12–24 V DC)
 Type 046x: 2: – (12–24 V DC)

5.2 Control Elements

E650 meters have the two display keys "down" and "up" and a reset key as conventional operating elements. The display can also be controlled with the aid of a light source via the optical interface.

5.2.1 Display Keys

The two display keys "down" and "up" are placed on the main face plate (top) on the right of the liquid crystal display.

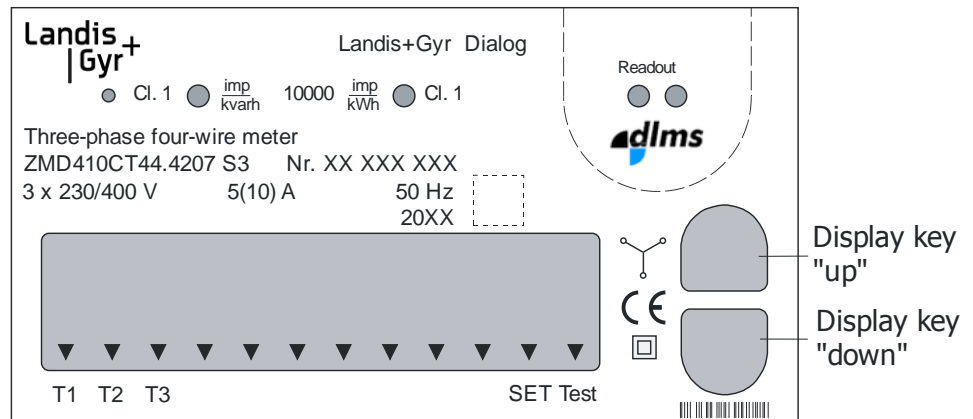


Fig. 5.2 Display keys

By pressing the lower display key "down", the display changes to the next value in the list. By pressing the upper display key "up", the display changes to the previous value (see also section 5.4.2 "Display Menu").

5.2.2 Control of Display via Optical Interface

All E650 meters have an "optical key" in addition to the "up" and "down" display keys. The optical interface serves to receive a light signal, e.g. generated by a torch (LED torches cannot be used for this). The light signal acts like the "down" display key and controls the display in one direction from one value to the next. This type of display control only functions when voltage is supplied to the meter.

The reader can also control the display at a distance from the meter depending on the light intensity from the source, e.g. through a protective glass disc in front of the meter.

5.2.3 Reset Key

The reset key is situated to the right of the battery compartment behind the front door. To permit operation of the reset key the front door must be opened and therefore the utility seal removed.

The reset key is normally used to perform a manual reset. If the display check is displayed (after operation of a display key), however, pressing of the reset key produces the service menu (see also section 5.4.3 "Service Menu").

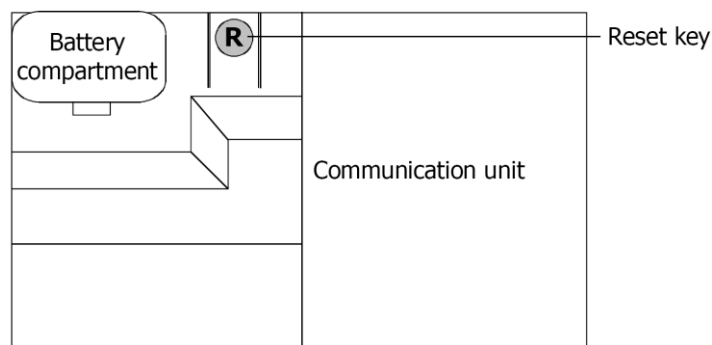


Fig. 5.3 Reset key behind front door

5.3 Display

5.3.1 Introduction

E650 meters are provided with a liquid crystal display (LCD).

The display can be provided with background lighting for easier reading (optional). This is switched on by pressing one of the display keys and is extinguished automatically after a short time if no further key is pressed.

5.3.2 Basic Layout

The basic layout shows all the indication possibilities of the display.

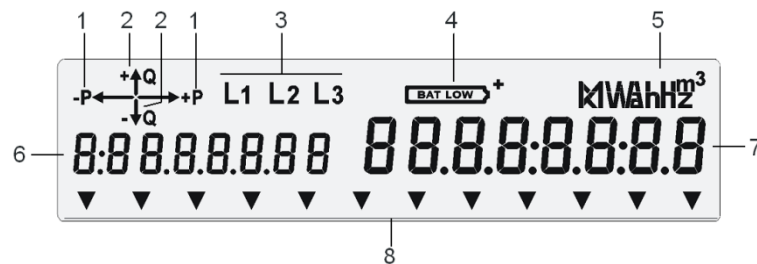


Fig. 5.4 Basic layout of the liquid crystal display (LCD)

- 1 Active power direction (+P: import, -P: export)
- 2 Reactive power direction (not used with ZMD400AT)
- 3 Phase voltages (flash if rotating field reversed)
- 4 Battery status (charge voltage)
- 5 Units field
- 6 Index field (8 digits)
- 7 Value field (8 digits)
- 8 12 arrow symbols for status information (e.g. tariffs)

Active power direction

Shows always the sum of the three phases:

- +P positive active energy direction (imported from power company)
- P← negative active energy direction (exported to power company)
- P← →+P negative active energy direction of individual phases (second arrow flashes).

Reactive power direction


Indicates for combimeters ZMD400CT always the sum of the three phases (not used for active energy meters ZMD400AT).

- +↑Q positive reactive energy direction
- ↓Q negative reactive energy direction

Quadrant display

Indicates for combimeters ZMD400CT in which quadrants the present measurement is made (not used for active energy meters ZMD400AT):

- ↑Q →+P 1st quadrant
- P← +↑Q 2nd quadrant
- P← -↓Q 3rd quadrant
- ↓Q →+P 4th quadrant

Phase voltages	L1 L2 L3	Indication of presence of phase voltages. If the rotating field corresponds to that given by the parameterisation, symbols L1, L2 and L3 are continuously lit. Otherwise they flash every second.
Battery condition		The symbol appears if the charge voltage of the battery fitted is too low (provided the meter is parameterised as "fitted with battery").
Units field	KVAhHz^{m3}	The following units are shown: W, var, VA, k..., M..., ...h, V, A, h, Hz, m ³ (var and VA only for combimeters)
Index field	8:88.8.8.8.8.8	Up to 8-digit indices are displayed, which define the value in the value field.
Value field	88.8.8.8.8.8.8	Up to 8-digit values are displayed.
Arrow symbols	▼ ▼ ▼ ▼	An arrow symbol is an additional status indication for tariff rates, reset block, test mode, etc. The arrow points to a status description on the face plate.

5.3.3 Index System

The information concerning which data are shown in the display is made with an index system and is supported by the unit over the value field.

The 8-digit index field permits all currently known index systems such as DIN, LG, VEOe, OBIS, etc.

The **B:C.D.E.F** structure applies to OBIS (Object Identification System):

- B** Defines the channel number, i.e. the number of the input of a metering device having several inputs for the measurement of energy of the same or different types (e.g. in data concentrators, registration units). This enables data from different sources to be identified.
- C** Defines the abstract or physical data items related to the information source concerned, e.g. active power, reactive power, apparent power, $\cos\phi$, current or voltage.
- D** Defines types, or the result of the processing of physical quantities according to various specific algorithms. The algorithms can deliver energy and demand quantities as well as other physical quantities.
- E** Defines the further processing of measurement results to tariff registers, according to the tariff rates in use. For abstract data or for measurement results for which tariffs are not relevant, this value group can be used for further classification.
- F** Defines the storage of data according to different billing periods. Where this is not relevant, this value group can be used for further classification.

To simplify reading of the index field, individual parts of the OBIS code can be omitted. The abstract or physical data C and type of data D must be shown. You can find further information in the E650 Functional Description, D000030112.

Examples

1.8.0: 1 = Active energy import (all phases); 8 = Status; 0 = Total

0.9.1: Local time

Reference is made for examples to the following display list and the read-out log (see section 5.7 "Data Readout").

5.4 Types of Display

The ZxD400xT has the following three types of display:

- **Operating display**

The values specified by the parameterisation are shown as a rolling display in the operating display. The display is always in operating mode when the display keys are not operated. The meter returns automatically from the display list to the operating display after a defined time. This display can consist of one or more values.

- **Display menu**

By pressing the display key the display check is activated and from there the user reaches the display menu by again pressing the display key. From the display menu values of the display list, the load profile(s), the event log etc. can be accessed. The display list, for example comprises all values which appear in the display after pressing a key. The values themselves and also the sequence can be parameterised. The display keys permit scrolling up and down in the list.

- **Service menu**

The user reaches the service menu by pressing the reset key starting from the display check. From the service menu, values of the service list, the set mode etc. can be accessed. The service list, for example, is an extended display list with additional values.

5.4.1 Operating Display

The values always displayed are considered the operating display. This can be parameterised as a fixed display (only one value present, e.g. the present tariff rate) or as a rolling display (several values alternate at a fixed rate, e.g. every 15 seconds).



running average demand
with status of integrating
period

Fig. 5.5 Example of a fixed display



Limiting to active values in rolling operating display

It is possible by parameterisation to limit the rolling display to active values. This helps to keep the rolling display clear, e.g. in meters with numerous energy and demand registers.

Error message

The meter can generate an error message on the basis of self-tests. According to parameterisation, this can be permanently included in the operating display. In the event of a serious error (fatal or critical error), it replaces the normal operating display. After a fatal error, the meter no longer operates and must be replaced. In case of a critical error, the error message can be acknowledged with the display key.



Fig. 5.6 Example of an error message (insufficient battery voltage)

In case of an error message the procedure described in section 6.2 "Data Readout" should be followed.

5.4.2 Display Menu

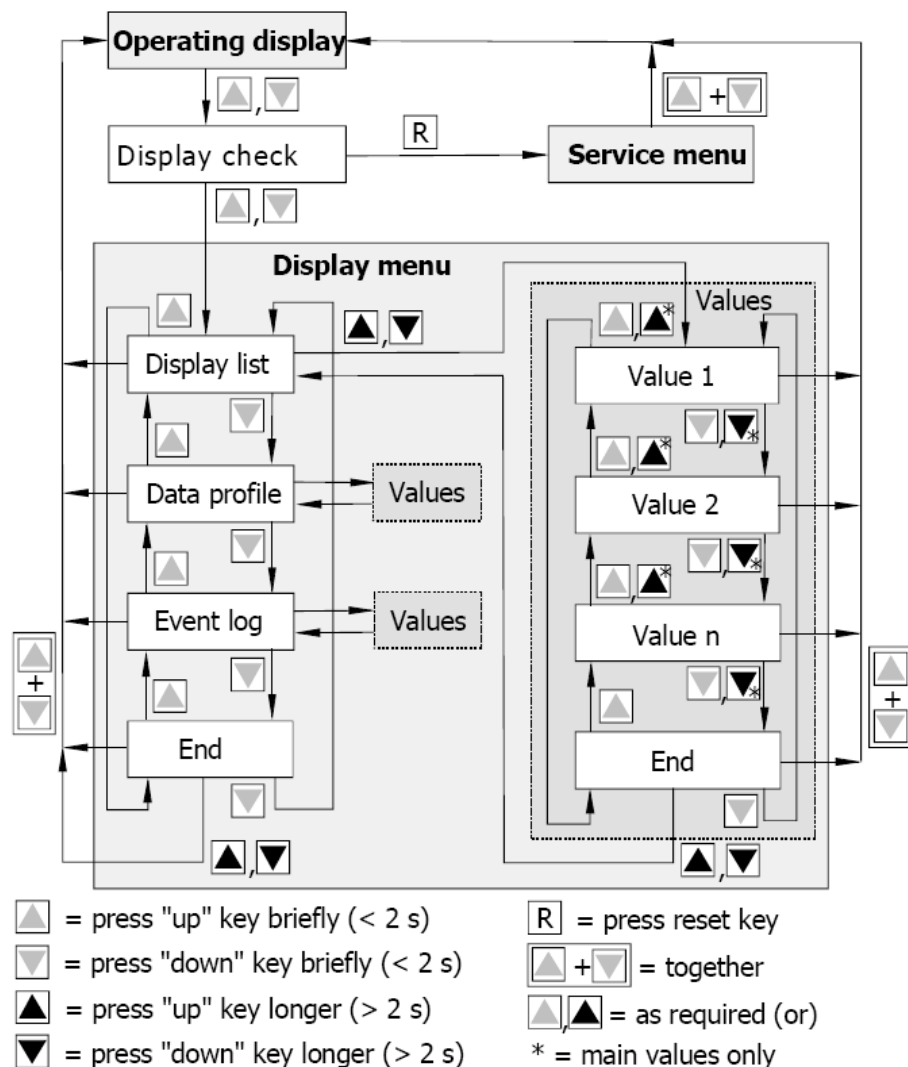



Fig. 5.7 Display menu overview

Display check

Brief operation (< 2s) of the display key "down" or "up" causes a change of the operating display, e.g.:




to the display check:

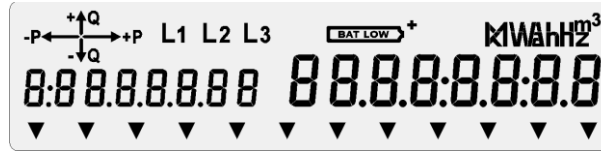

All segments of the display are active here. The index and value fields should be checked each time for missing segments. This can prevent incorrect readings.

Display menu

Pressing the display key "down" or "up" again **briefly**, changes to the display menu or directly to the display list. The first menu item appears, e.g. "Display list" (standard data):

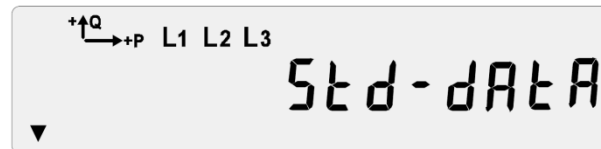

The menu item only appears when several menu items exist. Otherwise direct entry is made to the display list.

The next menu item appears for every further **brief** operation of the "down" display key, e.g. "Data profile", "Event log" etc. The first menu item appears again after the last item.

The preceding menu item is displayed again by briefly pressing the "up" display key.

Both display keys ("down" and "up") must be pressed **simultaneously** to return to the operating display from the display menu.

Value display









The first value of the list associated with the present menu is displayed by pressing the display key "down" or "up" for **longer** (at least 2 seconds), and is normally the error message:



The next list value appears for every further **brief** operation of the "down" display key. **Brief** operation of the "up" key again displays the preceding value. The sequence of values in the list is determined by the parameterisation.

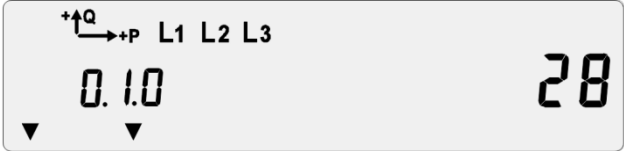A rapid run is started by **holding down** the display key "down" or "up" (at least 2 seconds). The main values of the list are then displayed while the key remains pressed, but no stored values.

Examples of values in a display list:

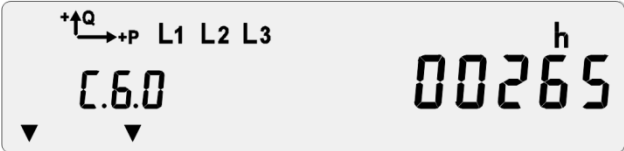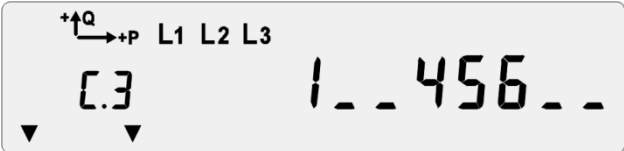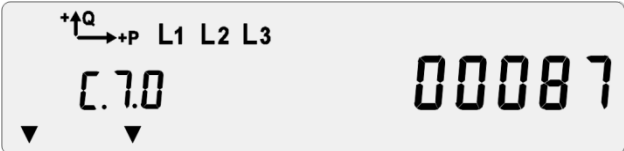
	Reset counter
	Date of resetting stored value 03 (March)
	Cumulated maximum demand active power
	Active energy present status
	Reactive energy present status
	Battery hours counter
	Status of signals at control terminals
	Number of total voltage failures

To return to the menu level from the list at the end of the display list press the display key "down" or "up" for **longer** (at least 2 seconds).

Both display keys ("down" and "up") must be pressed **simultaneously** to return to the operating display from the list.

Load profile 1


The load profile 1 menu item for selection in the display menu (denoted P.01) is shown as follows:

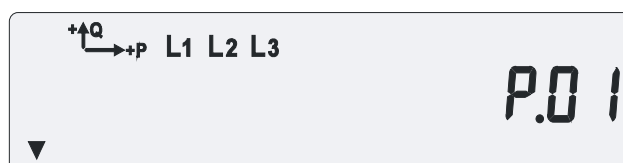

The first value of the load profile 1 is displayed by pressing the display key "down" or "up" for **longer** (at least 2 seconds).

Load profile 2


The load profile 2 menu item for selection in the display menu (denoted P.02) is shown as follows:

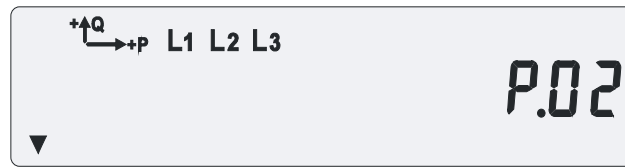

The first value of the load profile 2 is displayed by pressing the display key "down" or "up" for **longer** (at least 2 seconds).

Event log


The event log menu item for selection in the display menu (denoted P.98) is shown as follows:

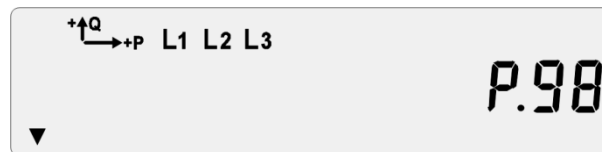

The first entry in the event log is displayed by pressing the display key "down" or "up" for **longer** (at least 2 seconds).

Losses

The losses menu item for selection in the display menu is shown as follows:

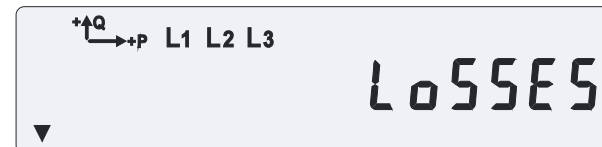

The first losses value is displayed by pressing the display key "down" or "up" for **longer** (at least 2 seconds).

Value display

The first value of the list associated with the present menu is displayed by pressing the display key "down" or "up" for **longer** (at least 2 seconds) (as for the display list).

The next list value appears for every further brief operation of the "down" display key. **Brief** operation of the "up" key again displays the preceding value. The sequence of values in the list is determined by the parameterisation.

A rapid run is started by holding down the display key "down" or "up" (at least 2 seconds). The main values of the list are then displayed while the key remains pressed, but no stored values.

To return to the menu level from the list at the end of the display list press the display key "down" or "up" for **longer** (at least 2 seconds).

Both display keys ("down" and "up") must be pressed **simultaneously** to return to the operating display from the list.

Set mode

Values can be changed in the value display of the set mode with the aid of the reset key and display keys (for setting time and date, identification numbers, battery hours counter, etc.). The procedure is described in section 5.9 "Changing Values in Set Mode".

5.5 Alert LED

The red alert LED on the main face plate indicates that certain event(s) have occurred. What event(s) trigger the alert LED can be set by parameterisation.

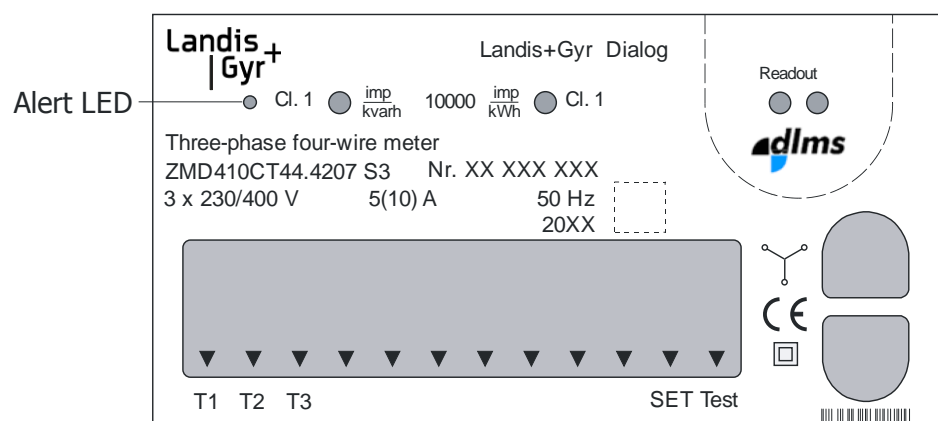


Fig. 5.9 Alert LED

5.6 Optical Test Output

The optical test outputs – one for active energy in all meters and a second for reactive energy in combimeters – are fitted in the main face plate above the liquid crystal display.

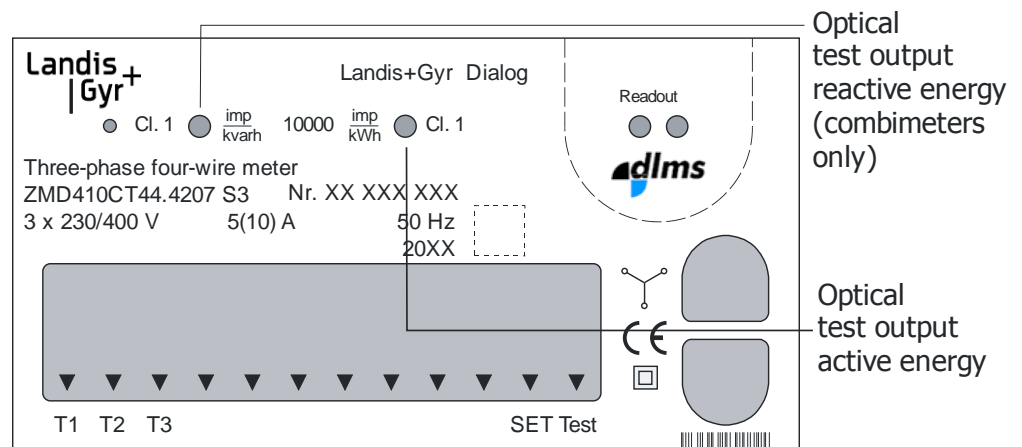


Fig. 5.10 Optical test outputs

The optical test outputs are used for testing the meter (see also section 7.1 "Changing Values in Set Mode"). They transmit visible red pulses corresponding to the current measured values (active and reactive energy).

5.7 Data Readout

The energy supply company can record the data stored locally in the meter at any time in two ways:

- Reading the liquid crystal display of the meter. Only those data can be recorded which appear in the rolling operating display or can be selected with the display key.
- Automatic data readout via the optical interface with the aid of a hand held terminal) or other readout device (e.g. laptop). Further data are then accessible depending on the parameterisation.



Readout data

For readout to IEC 62056-21 all data determined by the parameterisation are read out in the specified sequence.

For readout according to dlms (Device Language Message Specification) the data requested by the readout unit are read out.

If the meter is fitted with the appropriate communication unit (see associated separate operating instruction) remote readout of the meter data is also possible.

Procedure for data readout via optical interface

1. Start the hand held terminal (according to the details in the associated operating instructions).
2. Connect the cable of the reading head to the hand held terminal.
3. Place the reading head in the "Readout" indentation on the plastic viewing window of the meter. The reading head cable must point towards the terminal cover (when mounted vertically downwards). The reading head is held magnetically.
4. Start the data readout on the hand held terminal (according to the details in the associated operating instructions).
5. Remove the reading head from the meter again after completing the readout.

5.7.1 Readout to IEC 62056-21

The data read out according to IEC 62056-21 are recorded in the form shown below. The scope and sequence of values in the log is determined by the parameterisation.

Log example

Significance

/LGZ4\2ZMD4104100	Designation of meter (reply on transmit request)	
F.F (00000000)	Error message	
0.0.1 (417242)	1st identification number	
0.1.0 (28)	Number of resets	
0.1.2.04 (98-05-01 00:00)	Time of last reset	
1.2.1 (26068.7*kW)	P _{max} cumulated	Rate 1
1.2.2 (15534.8*kW)	P _{max} cumulated	Rate 2
1.6.1 (192.4*kW)(00-05-06 10:45)	P _{max} present	Rate 1
1.6.1*04 (202.4)(00-04-22 09:30)	with April stored value	Rate 1
1.6.2 (086.7*kW)(00-05-04 22:30)	P _{max} present	Rate 2
1.6.2*04 (100.9)(00-04-14 23:00)	with April stored value	Rate 2
1.8.1 (0244948*kWh)	Active energy (import)	Rate 1
1.8.1*04 (0234520)	with April stored value	Rate 1
1.8.2 (0082520*kWh)	Active energy (import)	Rate 2
1.8.2*04 (0078197)	with April stored value	Rate 2
5.8.1 (0106103*kvarh)	Reactive energy (inductive)	Rate 1
5.8.1*04 (0100734)	with April stored value	Rate 1
5.8.2 (0039591*kvarh)	Reactive energy (inductive)	Rate 2
5.8.2*04 (0036152)	with April stored value	Rate 2
1.8.0 (0327468*kWh)	Total active energy	
5.8.0 (0145694*kvarh)	Total reactive energy (inductive)	
8.8.0 (0001452*kvarh)	Total reactive energy (capacitive)	
0.9.1 (14:18:06)	Time-of-day of readout	
0.9.2 (00-05-20)	<u>Date of readout</u>	
C.7.0 (00087)	No. of voltage failures of all phases	
C.72.0 (00157)	Number of undervoltages	
C.73.0 (00000)	Number of overvoltages	
C.74.0 (00306)	Number of overloads (overcurrent)	
C.3.0 (500)	Active pulse constant	
C.3.1 (500)	Reactive pulse constant	
C.2.1 (00-03-26)	Date of last parameterisation	
!	End of log	

Notes

The energy supply company can select by parameterisation between a standard identification or its own identification. The standard identification has the following structure:

/LGZ...	Manufacturer	(Landis+Gyr)
/LGZ 4...	Baud rate 4 = 4800 Baud	
/LGZ4 \2...	Extended communication possibility	2 = DLMS-compatible meter
/LGZ4\2 ZMD410...	Meter	Type of measuring unit
/LGZ4\2ZMD410 41...		Basic version tariff section
/LGZ4\2ZMD41041 00...		Additional functions (auxiliary power supply)
/LGZ4\2ZMD4104100 .B31		Firmware version
Stored values	The hyphen following the identification number and the rate (1.6.1) denotes the type of resetting:	
e.g. 1.6.1*04	*04	Resetting made internally or remote controlled
e.g. 1.6.1&04	&04	Resetting performed manually or with reset key R

Identification by the energy supply company itself uses an identification number. ID1.1 (designation of ownership by the energy supply company), ID1.2 (any desired number) or ID2.1 (serial number) are available. The identification is comprised as follows in this case:

/LGZ...	Manufacturer	(Landis+Gyr)
/LGZ 4...	Baud rate 4 = 4800 Baud	
/LGZ4 \2...	Extended communication possibility	2 = DLMS-compatible meter
/LGZ4\2 \B31...	Meter	Firmware version
/LGZ4\2\B31 12345678		Identification number specified by parameterisation (maximum 8 characters)

5.7.2 Readout to dlms

While the readout according to IEC 62056-21 uses a protocol determined in advance, readout to dlms enables the power supply company to configure the values to be read out individually. The company therefore has systematic access to specific values without being influenced by other values that are not required.

dlms specification

Various meter manufacturers – including Landis+Gyr – together with related organisations, have compiled the language specification dlms (Device Language Message Specification) and undertaken to use this in their equipment (meters, tariff units, systems, etc.).

Objective

The objective of dlms is to use a common language for data exchange in the energy measurement and other sectors. In addition to end units such as meters, tariff units, etc. dlms also concerns the interfaces, transmission channels and system software.

Principle

dlms can be compared to sending a letter: the sender writes the address of the recipient on the letter and hands it to the post office for transport. The way in which the postal department transports the letter is of no consequence to the sender and receiver. The only important thing is that the address of the recipient is clearly shown and that the letter is received, read and it can be seen from whom the letter originates.

Units with dlms operate in a similar way. They provide the values – termed objects – required by the receiver (e.g. control centre) and pass them via interface to the transport medium (channel). How the values reach the recipient is again immaterial for both parties.

dlms items

dlms is an object-oriented language. The dlms objects

- have an unmistakable name in the form of the EDIS identification number
- contain the value in an exactly defined form and
- are configured in a similarly exactly defined format.

Objects of this kind are number of resets with date and time, cumulative maxima, rolling mean values, maxima, energy statuses, associated stored values, etc.

The sender feeds these objects to a transport medium, e.g. the telephone network. This transmits them to the receiver, so that the objects are received in the same form as supplied by the sender.

5.8 Input of Formatted Commands

The following operating data or meter characteristics can be modified by the input of formatted commands. The user of formatted commands, however, must have the necessary access authorisation according to the security system.

The following commands can be used both according to IEC 62056-21 and also with dlms:

- Set time/date
- Set identification numbers for the energy supply company and for the manufacturer (by line).
- Initiation of reset via interface
- Neutralise reset inputs KA/KB
- Set/reset reset counter
- Control tariff rates via interface
- Set/reset energy registers
- Set/reset total energy registers
- Set/reset demand maximum registers
- Set/reset power factor registers
- Reset stored values
- Reset battery hours counter
- Reset voltage failures registers
- Switch on/off increased resolution (test mode)
- Define by additional parameters whether the optical test output for active energy in test mode supplies active or reactive energy pulses
- Delete error messages
- Change passwords P1,P2 and W5
- Reset load profile 1 / load profile 2
- Reset event log
- Reset dedicated event log groups

The following commands can only be executed with dlms:

- Reset event register
 - Under- and overvoltages
 - Demand messages
 - Current messages
 - Power factor messages
- Set thresholds for messages

Formatted commands are transferred to the meter with a suitable aid (hand held terminal or laptop) via the optical interface or via an interface circuit of the communication unit.

5.9 Changing Values in Set Mode

In set mode, some values (date and time, identification numbers and battery hours counter) can be changed with the aid of the reset key and display keys, without the use of auxiliary aids such as hand-held terminal or laptop.

Procedure:

1. Remove the front door seal.
2. Open the front door, so that the reset key is accessible.
3. Press the "up" or "down" display key briefly. The display changes from operating display to display check.
4. Press the reset key. The display changes to the service menu with the first menu item.
5. Press the "down" display key as many times briefly, until the menu item "Set mode" (SEt) is displayed.
6. Press the "up" or "down" display key for **longer** (at least 2 seconds), until the first value for setting is displayed.
7. Select the value to be changed with the "up" or "down" display key.
8. Press the reset key. The first digit of the value to be changed flashes.
9. Change the digit by pressing the "up" (increase) or "down" (decrease) display key as required.
10. Press the reset key. The next digit of the value to be changed flashes, if it was not previously the last digit. Otherwise all digits flash together.
11. Repeat steps **9** and **10** for all digits of the value to be changed, until all digits of the changed value flash together.
12. Press the reset key to confirm the new value (the value set can be rejected and the previous value retained by pressing the "up" or "down" display key). After pressing the reset key the new value is given a plausibility test and stored if the test result is positive. The next value for setting is displayed. In the event of an error (e.g. invalid date or time) all digits continue flashing and the input must be repeated.
13. If required, further values can be changed as described in steps **7** to **12**.
14. If you press the "up" and "down" display keys simultaneously, the operating display appears again.
15. Close the front door.
16. Re-seal the front door.

6 Service

This chapter describes the necessary servicing work after the appearance of operating faults or error messages.

6.1 Operating Faults

If the liquid crystal display is illegible or the data readout does not function, the following points should first be checked:

1. Is the network voltage present (supply fuses intact and test terminals closed)?
2. Is the maximum permissible ambient temperature exceeded?
3. Is the plastic viewing window over the face plate clean (not scratched, painted over, misted over or soiled in any way)?



Danger of short-circuits

Never clean soiled meters under running water or with high pressure devices. Water penetration can cause short-circuits. If the meter is heavily soiled, it should be de-installed if necessary and sent to an authorised service centre, so that a new plastic viewing window can be fitted.

If none of the points listed is the cause of the fault, the meter should be disconnected, removed and sent to the responsible service and repair centre (according to section 6.3 "Repairing Meters").

6.2 Error Messages

The meters regularly perform an internal self-test. This checks the correct function of all important parts.

In the event of a serious error detected (fatal or critical error according to classification in the following degrees of severity), the meters display an error code. This error code appears as an eight-digit figure together with "F.F" or "FF" in the display, depending on the parameterisation and significance of the error. The error code is always included in the readout log (error code F.F(00000000) = no error).

Classification of degree of severity

The degree of severity of an error occurring is assessed as follows:

A **fatal error** indicates a severe problem, which prevents the meter maintaining measuring operation, e.g. a defective hardware component. The meter stops its operation and the error code is displayed permanently. The meter must be exchanged.

A **critical error** indicates a severe problem, but with which the meter continues to function and measurement is still possible. The data are stored in the memory and suitably marked in case of doubt. After a critical error, the error code is displayed until acknowledged with the display key or the error register is reset, e.g. via the electrical interface. Depending on the type of the error this can cyclically occur again, since with the acknowledgement the error cause is not repaired. The meter must be exchanged as soon as possible.

Non-critical errors can influence the meter functions (temporarily or permanently). These errors are recorded in the error register. The meter remains serviceable and need not normally be exchanged.

Deleting error messages

If nothing else is specified in the following description of the error groups, the error messages can only be deleted with formatted commands (see section 5.8 "Input of Formatted Commands"). If the error occurs again, the meter should be removed and sent to the responsible service and repair centre (according to section 6.3 "Repairing Meters").

6.2.1 Structure of an Error Message

An error message has the following form:



Fig. 6.1 Error message on E650 meters

All E650 meters use the same format for error messages. It consists of four groups of 2 digits each, whereby the groups have the following significance:

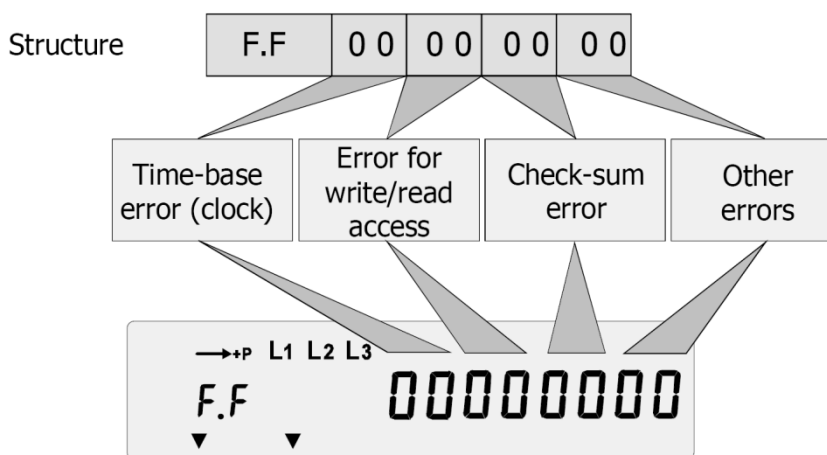


Fig. 6.2 Significance of error message

Each group has two digits written in hexadecimal notation and can therefore have the values 0 to 9 and letters A to F. Both digits each form the sum of the individual values of 4 possible types of error as shown in the following diagrams.

6.2.2 Error Groups

Time-base errors (clock)

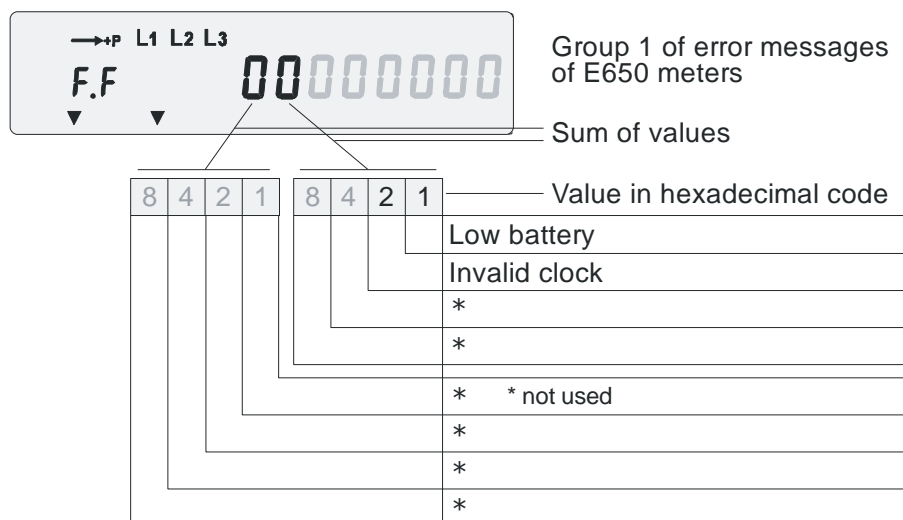


Fig. 6.3 Group 1 of error messages

The first digit in the first group has no significance, since no error messages are assigned to it.

The second digit can have values between 0 (no error message) and 3 (both error messages set). Significance:

F.F 01 00 00 00

Low battery (non-critical error)

The battery is missing or discharged. If there is no mains voltage at the meter and the internal supercap is discharged (after about 3 weeks) then the calendar clock will stop.

The error is deleted automatically when the battery voltage has again reached a sufficient value (e.g. after inserting a new battery as described in section 7.2 "Changing the Battery").

This error message only appears if the meter is parameterised as "fitted with battery". Otherwise there is no check of the battery condition.

F.F 02 00 00 00

Invalid clock (non-critical error)

The meter has found that the calendar clock has stopped at some time, e.g. due to insufficient power reserve (battery low). The clock is running, but shows the wrong time and/or date.

The error is deleted automatically when the time and date have been set correctly by the relevant formatted command or manually in the set mode (see section 5.8 "Input of Formatted Commands"). or section 5.9 "Changing Values in Set Mode"). If necessary, replace the battery.

Errors for write/read access

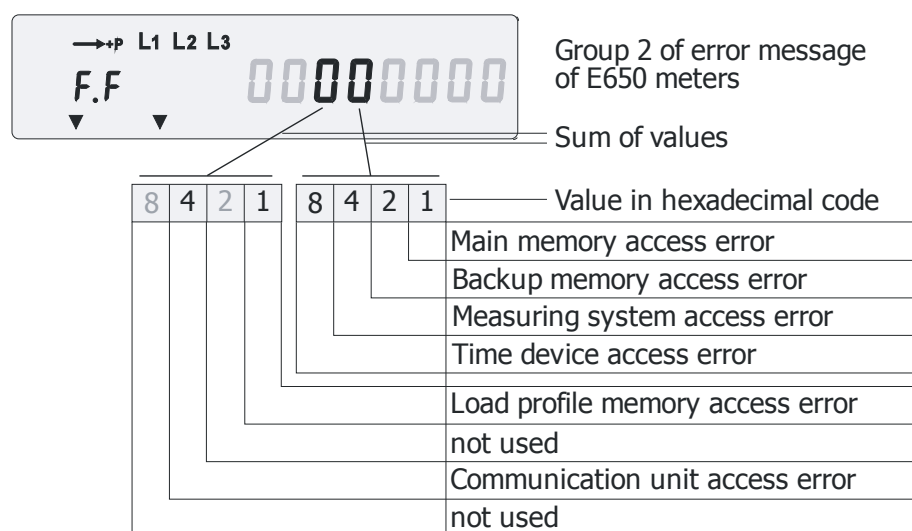


Fig. 6.4 Group 2 of error messages

In the second group both digits can have values between 0 (no error message) and F (all four error messages set). Significance:

F.F 00 x1 00 00

Main memory access error (fatal error)

This error message appears if the main memory could not be accessed several times during the start-up of the meter.

The meter may contain incorrect data and must be exchanged.

The same applies to messages where the bit is set:

F.F .. x3/x5/x7/x9/xB/xD/xF

F.F 00 x2 00 00

Backup memory access error (non-critical error)

This error message appears if the backup memory could not be accessed several times.

The meter may contain incorrect data and must be exchanged.

The same applies to messages where the bit is set:

F.F .. x3/x6/x7/xA/xB/xE/xF

F.F 00 x4 00 00

Measuring system access error (non-critical error)

The meter supplies this message in the event of repeated failures when accessing the measuring system. It can sometimes occur if meters are installed with a completely discharged supercap which causes an incorrect start-up behaviour.

Power-up meter and wait for a short time, then clear error via communication. If the error doesn't reoccur, it is recommended to equip the meter with a battery. If the error reoccurs, replace the meter.

The same applies to messages where the bit is set:

F.F x5/x6/x7/xC/xD/xE/xF.

F.F 00 x8 00 00

Time device access error (non-critical error)

The meter sets this message in the event of repeated failures when accessing the time device. The calendar clock may display an invalid time or date.

The error can be reset via communication. If it occurs repeatedly, the meter must be exchanged.

The same applies to messages where the bit is set:

F.F x9/xA/xB/xC/xD/xE/xF.

F.F 00 1x 00 00

Load profile memory access error (critical error)

This error message appears in the event of repeated failures when accessing the load profile memory.

Load profile data will be marked in the status code (bit 2 "corrupted measurement" and bit 0 "critical error" set).

It may not be possible to access the load profile memory. The memory may contain incorrect data. **The meter must be exchanged.**

The same applies to messages where the bit is set: F.F ... 5x.

F.F 00 4x 00 00

Communication unit access error (non-critical error)

The meter sets this message in the event of repeated failures to access the communication unit. Communication fails or is slow.

The error can be reset via communication. If it reoccurs, replace first the communication unit, check the function again. If the error still occurs, the meter must be exchanged.

The same applies to messages where the bit is set: F.F ... 5x.

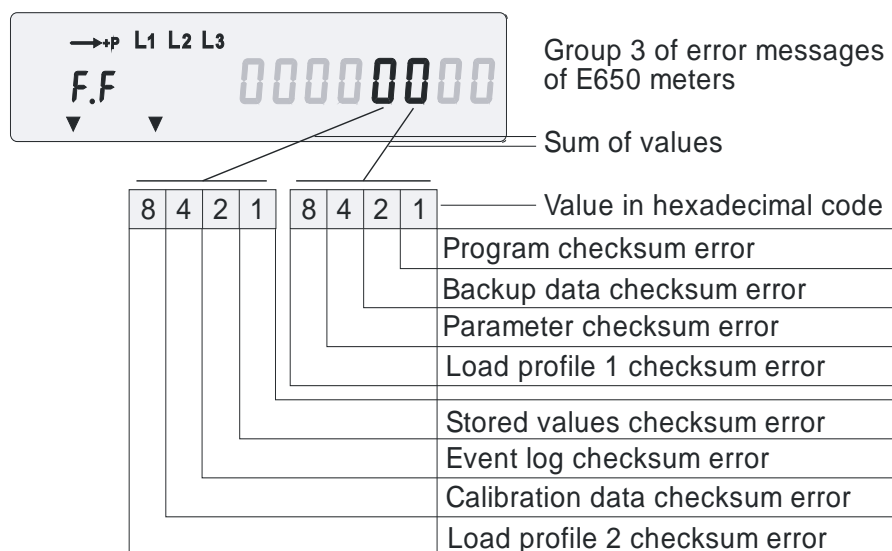
Checksum errors

Fig. 6.5 Group 3 of error messages

The first digit in the third group can have the value 0 (no error message) or 1 (error message set).

The second digit can have values between 0 (no error message) and F (all four error messages set). Significance:

F.F 00 00 x1 00

Program checksum error (fatal error)

The meter does not operate and must be exchanged.

The same applies to messages where the bit is set:
F.F ... 03/05/07/09/0B/0D/0F.

F.F 00 00 x2 00	<p>Backup data checksum error (critical error)</p> <p>This error message appears when the backup data checksum test fails.</p> <p>Load profile data will be marked in the status code (bit 2 "corrupted measurement" and bit 0 "critical error" set). The meter may contain incorrect data and must be exchanged.</p> <p>The same applies to messages where the bit is set: F.F 03/06/07/0A/0B/0E/0F.</p>
F.F 00 00 x4 00	<p>Parameter checksum error (critical error)</p> <p>This error message appears when the parameter checksum test fails.</p> <p>Load profile data will be marked in the status code ("bit 0 "critical error" set). The meter may contain incorrect data and must be exchanged.</p> <p>The same applies to messages where the bit is set: F.F 05/06/07/0C/0D/0E/0F.</p>
F.F 00 00 x8 00	<p>Load profile 1 checksum error (non-critical error)</p> <p>Load profile 1 data of the defective memory area will be marked in the status code (bit 2 "corrupted measurement" set).</p> <p>The error can be reset via communication. Reset the load profile first and then the error. If it occurs repeatedly, the meter must be replaced as soon as possible.</p> <p>The same applies to messages where the bit is set: F.F 09/0A/0B/0C/0D/0E/0F.</p>
F.F 00 00 1x 00	<p>Stored values checksum error (critical error)</p> <p>Data in the defective memory area will be marked in the status code (bit 0 "critical error" set).</p> <p>The error can be reset via communication. If it occurs repeatedly, the meter must be replaced as soon as possible.</p>
F.F 00 00 2x 00	<p>Event log checksum error (non-critical error)</p> <p>Data in the defective memory area will be marked in the status code (bit 0 set).</p> <p>The error can be reset via communication. If it occurs repeatedly, the meter must be replaced as soon as possible.</p>
F.F 00 00 4x 00	<p>Calibration data checksum error (critical error)</p> <p>Data in the defective memory area will be marked in the status code (bit 0 "critical error" set).</p> <p>The meter must be replaced as soon as possible.</p>
F.F 00 00 8x 00	<p>Load profile 2 checksum error (non-critical error)</p> <p>Load profile 2 data of the defective memory area will be marked in the status code.</p> <p>The error can be reset via communication. Reset the load profile first and then the error. If it occurs repeatedly, the meter must be replaced as soon as possible.</p> <p>The same applies to messages where the bit is set: F.F 90/A0/B0/C0/D0/E0/F0.</p>

Other errors

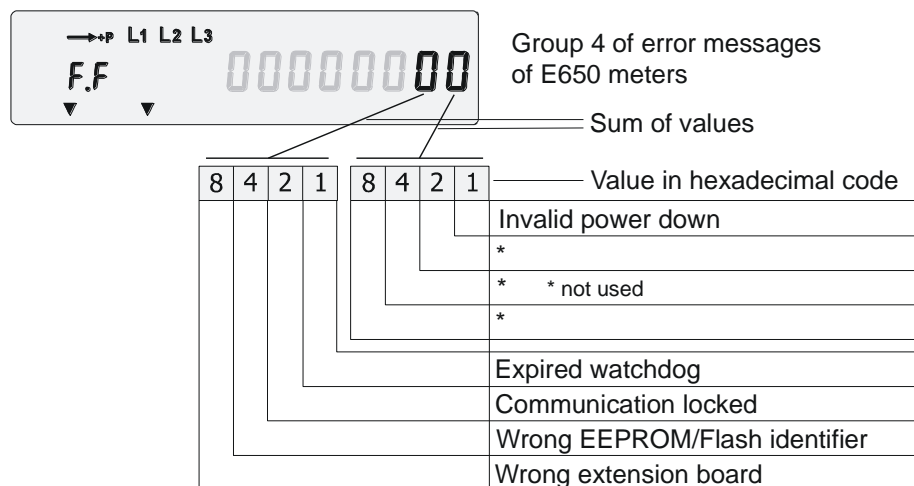


Fig. 6.6 Group 4 of error messages

The first digit in the fourth group can have the values 0 to F.

The second digit can have values between 0 (no error message) and 1 (Invalid power down). Significance:

F.F 00 00 00 x1

Invalid power down (non-critical error)

The meter has detected that the last data storage was not performed correctly. The meter may contain incorrect data or may have lost data since the last storage, i.e. for 24 hours maximum.

The error can be reset via communication. If it occurs repeatedly, contact Landis+Gyr Customer Services.

F.F 00 00 00 1x

Expired watchdog (non-critical error)

The microprocessor was restarted due to a disturbance (e.g. lightning). The meter may lose all data recorded since the last storage, i.e. for 24 hours maximum.

The error can be reset via communication. If it occurs repeatedly, contact Landis+Gyr Customer Services.

The same applies to messages where the bit is set:

F.F .. 3x/5x/7x/9x/Bx/Dx/Fx.

F.F 00 00 00 2x

Communication locked (non-critical error)

This error indicates access attempts via the communication interface with wrong passwords.

The error is automatically deleted after the inhibition time or at midnight.

The same applies to messages where the bit is set:

F.F .. 3x/6x/7x/Ax/Bx/Ex/Fx.

F.F 00 00 00 4x

Wrong EEPROM/Flash (fatal error)

Incorrect EEPROM/ Flash memory is installed in meter.

The meter does not operate and must be exchanged.

The same applies to messages where the bit is set:

F.F .. 5x/6x/7x/Cx/Dx/Ex/Fx

F.F 00 00 00 8x

Wrong extension board (non-critical error)

Identification of extension board differs from that parameterised in the meter.

The meter might not have the required functions such as data profile, control inputs or output signals. **The meter has to be exchanged.**

The same applies to messages where the bit is set:

F.F 9x/Ax/Bx/Cx/Dx/Ex/Fx.

6.3 Repairing Meters

Meters must only be repaired by an authorised service and repair centre (or manufacturer).

The following procedure should be adopted if a meter repair is necessary:

1. If the meter is installed, remove the meter as described in section 4.7 "De-Installation" and fit a substitute meter.
2. Describe the error found as exactly as possible and state the name and telephone number of the person responsible in case of inquiries.
3. Pack the meter to ensure it can suffer no further damage during transport. Preferably use the original packing if available. Do not enclose any loose components.
4. Send the meter to the responsible service and repair centre.

7 Maintenance

This chapter describes the necessary maintenance work.

7.1 Meter Testing

Meter tests should be performed at periodic intervals according to the valid national regulations (either on all meters or on specific random samples). In principle, the meters should be de-installed for this purpose according to the instructions in section 4.7 "De-Installation" and replaced by a substitute meter. The meter test can also be performed on the spot in certain circumstances.

7.1.1 Test Mode

The test mode permits increasing the resolution of the energy registers by 1 to 5 digits. This allows the energy supply company to carry out the so called measuring unit test in a reasonably short time.

In test mode, the same registers shown as a rolling list in the operating display are always displayed, but with high resolution and not rolling.

The energy registers comprise a total of 12 digits. A maximum of 8 digits, however, is shown on the display. The effective number of digits shown and the number of decimal places are determined by the parameterisation. For the test mode more decimal places are normally parameterised (maximum 5) to permit a quicker test of the transmission to the energy registers.

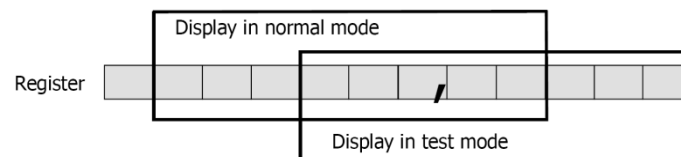


Fig. 7.1 Display changeover normal mode – test mode

Changeover from normal to test mode and back is made by formatted commands (see section 5.8 "Input of Formatted Commands") or manually in the service menu.

In test mode, the optical test output for active energy can also provide reactive energy pulses depending on the parameterisation. Reactive energy pulses are supplied to this test output if the register shown on the display represents a reactive energy register. Active energy pulses are supplied for all other measured values shown as in normal operating mode. Formatted commands can also be used to define whether the optical test output for active energy in test mode should supply active or reactive energy pulses, independent of the type of register shown on the display. This permits changeover without manual intervention.

7.1.2 Measuring Times

For technical reasons, greater measuring deviations can occur during short-term measurements. It is therefore recommended to use sufficiently long measuring times in order to achieve the required accuracy.

Table of measuring times required at the optical test output:

ZMD400xT
ZFD400xT $U_n = 58 \text{ to } 230 \text{ V}$ $I_n = 1 \text{ A, } 5 \text{ A}$

Current [% I_n]	Measuring uncertainty 0.1%			Measuring uncertainty 0.05%		
	3 P $\cos\varphi=1$	1 P 1	3 P 0.5	3 P $\cos\varphi=1$	1 P 1	3 P 0.5
1	40 s	40 s	90 s	80 s	80 s	160 s
2	20 s	20 s	40 s	40 s	40 s	80 s
5	10 s	10 s	15 s	16 s	16 s	32 s
10	8 s	8 s	10 s	14 s	14 s	18 s
20	6 s	6 s	8 s	12 s	12 s	14 s
50	6 s	6 s	6 s	12 s	12 s	12 s
100	6 s	6 s	6 s	12 s	12 s	12 s
200	6 s	6 s	6 s	12 s	12 s	12 s

3 P = universal

1 P = single-phase

7.1.3 Optical Test Output

The red optical test outputs on the meter above the LCD should be used for meter testing. These supply pulses at a frequency dependent on the meter constant R, whereby the rising edge is always decisive for the test.

Note that the digital signal processing provides a delay of 2 seconds between the instantaneous power at the meter and the appearance of the pulses at the optical test outputs. No pulses are lost.

The number of pulses per second for the desired power is obtained by multiplying the meter constant R by the power in kW divided by 3600.

Example: Meter constant R = 1000









Power P = 35 kW

f-test output = $R \times P / 3600 = 1000 \times 35 / 3600 = 10 \text{ imp/s}$

Test Mode

The test mode enables you to select which measuring value (active, reactive, I^2 , U^2) is shown on the optical test output.

In the display, values for active, reactive and apparent energy are available. Depending on parameter setting, the resolution of the display register can be increased for faster testing. In the test mode, the resolution is increased by one decimal point compared with the normal mode. A maximum of 5 decimal points is possible.

1.		Select test mode		Test mode
2.		Enter test mode		First value
3.		Select required value		Value x
4.		Repeat step 3 for all values to be tested		
5.		Exit test mode		Operating display



Examples

First value and value x are examples. The real values are defined in the parameter settings and are the same as the operating display.

The measured values are displayed at the optical test outputs as shown in the following table:

Mode	Register on Display	Test output reactive	Test output active
Normal mode	Some sort of register	R	A
Test mode	NLA register (Transformer losses per phase NLA1,NLA2,NLA3; Total Transformer Losses NLA)	I^2 with $R_{CU}=1\ \Omega$	U^2 with $R_{FE}=1\ M\Omega$
	OLA register (Line losses per phase OLA1, OLA2, OLA3; Total line losses OLA)	U^2 with $R_{FE}=1\ M\Omega$	I^2 with $R_{CU}=1\ \Omega$
	Reactive energy register	A	R
	Active energy register or one of not mentioned registers in this table.	R	A

7.1.4 Creep Test

A test voltage U_p of $1.15 U_n$ is used for the creep test (no-load test) to IEC 61036 (e.g. $U_p = 265 \text{ V}$ with $U_n = 230 \text{ V}$).

Procedure:

1. Disconnect the meter from the network for at least 10 seconds.
2. Then switch on the test voltage U_p and wait approx. 10 seconds. After this time the energy direction arrows must disappear. The red optical test outputs are permanently "lit".
3. Switch on test mode (high resolution).

The meter must not deliver more than one pulse during the creep test. Check the energy levels for changes in test mode. They must not increase by more than the value of one pulse (see face plate).

7.1.5 Starting Test Active Part

Procedure:

1. Apply a load current of 0.02% of the nominal current I_n (IEC-meters) or 0.02% of the reference current I_{ref} (MID-meters) – e.g. 1 mA with $I_n = I_{ref} = 5 \text{ A}$ – and the voltage U_n (three-phase in each case) and **$\cos\phi = 1$** . The meter must remain in creep.
2. **For ZxD410:** Increase the load current to 0.2% I_n (IEC-meters) or 0.2% I_{ref} (MID-meters) – e.g. 10 mA with $I_n = I_{ref} = 5 \text{ A}$.

For ZxD405, ZxD402: Increase load current to 0.1% I_n ($=0.1 I_{ref}$). The energy direction arrow "P" must appear within 10 seconds. The optical test output for active energy consumption is no longer permanently "lit".


7.1.6 Starting Test Reactive Part

Procedure:


1. Apply a load current of 0.02% of the nominal current I_n (e.g. 1 mA with $I_n = 5 \text{ A}$) and the voltage U_n (three-phase in each case) and **$\sin\phi = 1$** . The meter must remain in creep.
2. Increase the load current to 0.2% I_n (i.e. 10 mA with $I_n = 5 \text{ A}$). The energy direction arrow "Q" must appear within 10 seconds. The optical test output for reactive energy consumption is no longer permanently "lit".

7.2 Changing the Battery

If the meter is provided with a battery, this must be changed if one of the following events occurs:

- The **BAT LOW**  symbol appears on the display.
- The battery has been in the meter for more than 10 years (preventive servicing). It is recommended to note the date of insertion on the battery. The 10 years depend on the product and on the age of the battery when inserting it into the meter.
- The battery operating hours counter indicates over 80,000 hours (can be read under code C.6.0 in service mode).
- The battery charge indicates less than 4.8 V (can be read under code C.6.1 in service mode).

**Meters with or without battery**

Only meters parameterised as "fitted with battery" have the * symbol and the battery operating hours counter.

**Dangerous voltage on contacts in the battery compartment**

The contacts in the battery compartment may have mains voltage applied (F circuit). Therefore only remove the battery with the existing battery holder and insert the new battery only with the battery holder. Ensure that the contacts are never touched.

**Replacement battery**

As a replacement, use only a lithium battery with a rated voltage of 6 V and the same construction as the original battery.

Procedure:

1. Remove the front door seal.
2. Open the front door.
The battery compartment is on the left below the liquid crystal display.

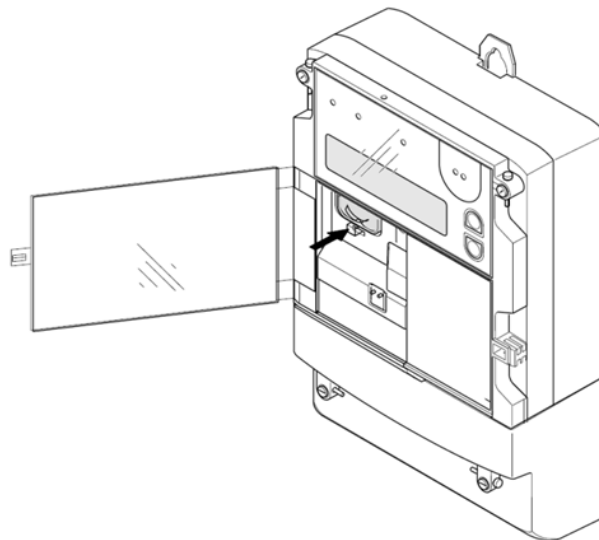


Fig. 7.2 Battery compartment

3. Press on the latch of the plastic battery holder until it releases and then withdraw the battery holder with the old battery.

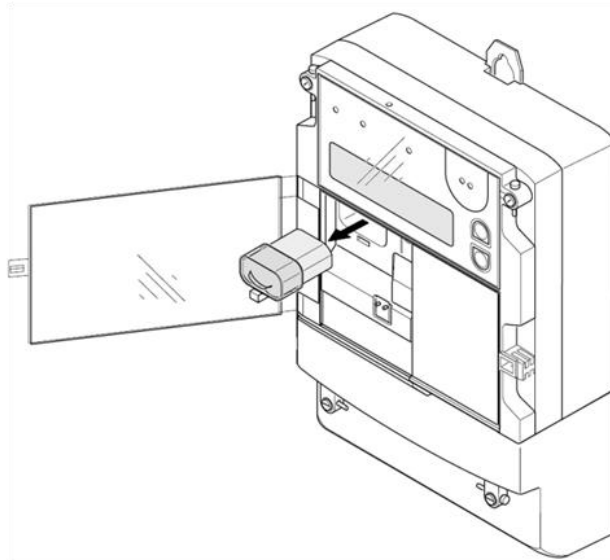


Fig. 7.3 Removing the battery

4. Mark the current date on the new battery.
5. Withdraw the old battery from the holder and insert the new battery.
6. Push the battery holder with battery into the battery compartment until the latch engages.
7. Reset the battery hours counter to zero with the relevant formatted command (see section 5.8 "Input of Formatted Commands") or in the set mode (see section 5.9 "Changing Values in Set Mode").
8. Close the front door.
9. Re-seal the front door.
10. Dispose of old batteries as hazardous waste in accordance with local regulations.



Checking time-of-day and date

After inserting the battery, check the time-of-day and date without power applied and set these values again if necessary.

8 Disposal

Based on the data specified in environmental certificate ISO 14001, the components used in meters are largely separable and can therefore be taken to the relevant disposal or recycling point.



Disposal and environmental protection regulations

For the disposal of meters observe the local disposal and environmental protection regulations in effect without fail.

Components	Disposal
Printed circuit boards, LCD, LEDs	Electronic waste: disposal according to local regulations.
Battery	Hazardous waste: disposal according to local regulations.
Metal parts	Sorted and taken to collective materials disposal point.
Plastic components	Sorted and taken to recycling (regranulation) plant or if no other possibility to refuse incineration.

9 Index

This chapter contains an overall index of this user manual.

Accuracy class 0.2S.....	9	Connection to low voltage.....	44
Active component	13	Connection to medium and high voltage	45, 46
Active energy	16	Connections	37
Active power	13, 16	Contact voltages.....	45
Active power calculation.....	13	Control elements	58
Active power direction.....	60	Control inputs	10
Additional control inputs.....	12	Control of display via optical interface.....	59
Additional output contacts	12	Creep test.....	87
Alert LED	68	Critical errors	76
Anti-tampering features.....	30	CS	12
Apparent energy	18	Current transformer	44
Apparent energy calculation.....	18	Danger level	31
Aron circuit.....	13, 45	Data preparation for billing.....	11
Arrow symbols	61	Data readout.....	70
Arrows for status indication	36	DC magnet detection	30
Automatic data readout.....	70	Dedicated event log	24
Auxiliary power supply	12	De-installation.....	56
Background lighting	60	Description of unit.....	6
Backup data checksum error	81	Device Language Message Specification	70
Backup memory access error	79	Digital intermediate values.....	13
Basic layout of LCD	60	Direction of rotating field	20
Battery charge status	87	Display.....	60
Battery compartment.....	34, 88	Display changeover normal mode – test mode	84
Battery condition	61	Display check	64
Battery exchange.....	87	Display keys	33, 36, 58
Battery operating hours counter	87	Display list examples	64
Billing data	11	Display menu.....	63, 64
Block schematic diagram	9	Disposal.....	90
Buttons	10	Disposal and environmental protection	90
Calculation of apparent energy	18	regulations.....	90
Calibration data checksum error	81	dlms.....	70
Calibration stage.....	13	dlms items	73
Changing values in set mode.....	75	dlms specification	72
Characteristics of meters	6	Earthing	45
Check of connections.....	53	Energy components.....	16
Checksum errors.....	80	Energy magnitude	16
Combimeters	6	Entering formatted commands.....	27
Commissioning	53	Error code.....	76
Communication.....	27	Error message	63
Communication locked.....	82	Error message structure	77
Communication unit	12, 34	Error messages	76
Communication unit access error.....	80	Error severity	76
Communication unit dummy.....	34	Errors for write/read access	79
Communication units	27	Event log	24, 66
Condition of test terminal block before	57	Expired watchdog	82
removing meter.....	57	Extended suspension hook.....	47
Connecting meter.....	49	Extension board.....	12
Connecting the meter.....	50	Face plate.....	36
Connecting the phase connection lines.....	50	Fatal errors	76
Connection check	53	Field of application.....	6
Connection diagrams (examples).....	39	Firmware version	9
Connection of cables of cover detection unit	55	Fixed display.....	62
Connection of RS485 interface	52		

Fixing of cover detection unit to meter	55	Medium voltage.....	6
Form of fixing.....	47	Medium voltage range.....	45
Formation of measured quantities	16	Memory.....	11
formatted commands.....	27	Meter board.....	47
Formatted commands.....	74, 84	Meter case	33
Four-quadrant measurement	17	Meter characteristics	6
Front door sealing with padlock	35	Meter characteristics modification	74
Functional check	53	Meter constant	85
Hand-held terminal	75	Meter mounting	47
Harmonics	14	Meter testing	69, 84
Hazardous waste.....	90	Modem	12
High voltage	6, 46	Mounting the meter	47
High voltage range	45	Natural error compensation	13
IEC 62056-21	70, 74	Neutral current	19
Index field.....	61	No-load test.....	87
Index system	61	Non-critical errors.....	76
Information for connecting meter	44	Normal mode	84
Input of formatted commands	74	Numbering of quadrants	17
Input signals	12	OBIS	61
Inputs	10	Object Identification System	61
Installation	44	Operating data modifications.....	74
Interface of communication unit.....	74	Operating display	62
Intermediate values	13	Operating faults.....	76
Internal current transformers	13	Optical interface	27, 33, 36, 74
Invalid clock.....	78	Optical key	59
Invalid power down.....	82	Optical test output	33, 36, 69, 85
Keys	10	Output contact data.....	37
Laptop	75	Outputs	10
LCD.....	36, 60	Ownership designation.....	37
Liquid crystal display	36, 60	Packing meter	83
Lithium battery.....	88	Parameter checksum error	81
Load profile 1	23	Phase angles	19
Load profile 2 (option).....	23	Phase connections.....	10, 37
Load profile 2 checksum error	81	Phase current.....	19
Load profile checksum error	81	Phase voltage	19
Load profile memory access error	80	Phase voltages.....	61
Log example.....	71	Power factor.....	19
Losses.....	21, 66	Power supply	12
Low battery.....	78	Preliminary fuses.....	45
Low voltage	6	Preliminary work.....	49
Lower part of case.....	34	Principle	73
Magnet detection.....	30	Profile 2.....	23
Main face plate	36	Program checksum error	80
Main memory access error	79	Pulse input data	37
Mains frequency	14, 19	Pulse inputs	10
Maintenance.....	84	Purpose of this manual.....	3
Manufacturer seal.....	33	Quadrant display	60
MAP110	29	Quadrants	17
MAP120	29	Rapid run	64
Mean value formation	15	Reactive component	14
Measured quantities	10, 11, 15, 37	Reactive energy	17
Measuring deviations.....	84	Reactive power	14
Measuring device	45	Reactive power calculation.....	14
Measuring system	10, 12	Reactive power direction	60
Measuring system access error	79	Reading head.....	70
Measuring times for meter tests	84	Readout factor.....	37
Measuring uncertainty	85	Readout to dlms	72

Readout to IEC 62056-21	71	Tariff face plate.....	37
Readout via optical interface	70	Terminal cover.....	33
Recording counting pulses of other media	6	Terminal cover detection	30
Remote reading	12	Terminal layout	38
Repairing meters.....	83	Test mode	84, 86
Replacement battery.....	88	Test terminal block.....	44
Reset key.....	34, 59, 75	Test terminal block status before installation	50
Responsibilities (safety relevant).....	31	Test terminal blocks status after	
Rolling display.....	62	commissioning.....	54
Rotating field.....	14	Test voltage	87
RS232.....	12	Time device access error	79
RS485.....	12	Time measurement.....	14
Safety regulations	32	Time-base errors	78
Safety symbols	31	Total active energy	17
Seal component.....	35	Total apparent energy.....	18
Sealing.....	33, 53	Total harmonic distortions.....	20
Secondary circuit	44	Total reactive energy	17
Self-tests.....	63	Transformer connection	6
Series designation	9	Transformer data	37
Service.....	76	Transmission contact meters	6
Service and repair centre	83	Transmission contacts	6
Service menu	67	Type designation	8
Set mode	68	Type of measurement ZFD400xT	13
Severity of errors.....	76	Type of measurement ZMD400xT	12
Signal conversion and processing.....	13	Types of display.....	62
Signal processing.....	10	Types of error	77
Signal processor	13, 15	Units field.....	61
Signal utilisation	11	Upper part of case	33
Software tools	29	Utility seal	33
Spring-loaded terminals	38	Value display	64
Starting test.....	87	Value field.....	61
Status indication arrows	36	Verification seal	33
Stored value profile	23	Versions of communication units	28
Stored values checksum error.....	81	Voltage circuit.....	44
Structure of error message	77	Voltage divider.....	13
Substitute meter.....	57, 83, 84	Voltage transformer	45
Summation channels	22	Wrong EEPROM/Flash.....	82
Suspension triangle	48	Wrong extension board.....	83
Symmetrical terminal layout	9, 38	Zero passage.....	14, 19
Target group of this manual	3	ZFD400AT/CT	6
Tariff control.....	11	ZMD400AT/CT	6